






March 701 CAR04 Instructions


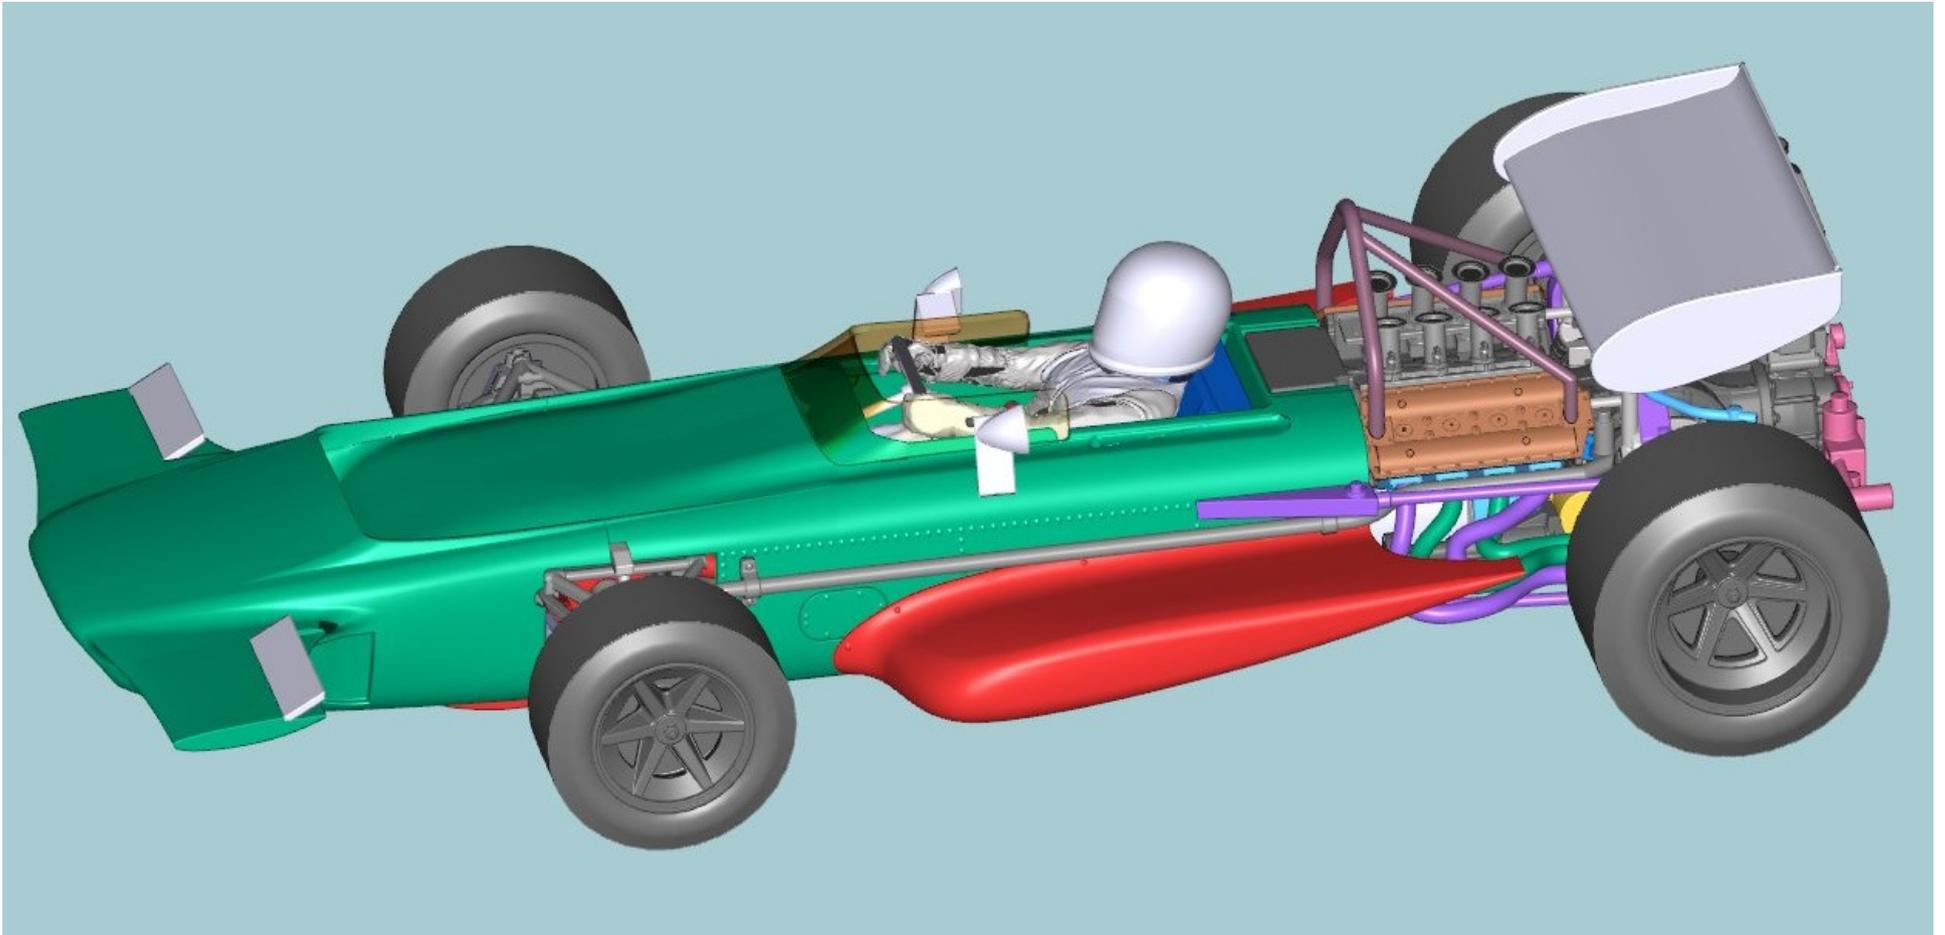


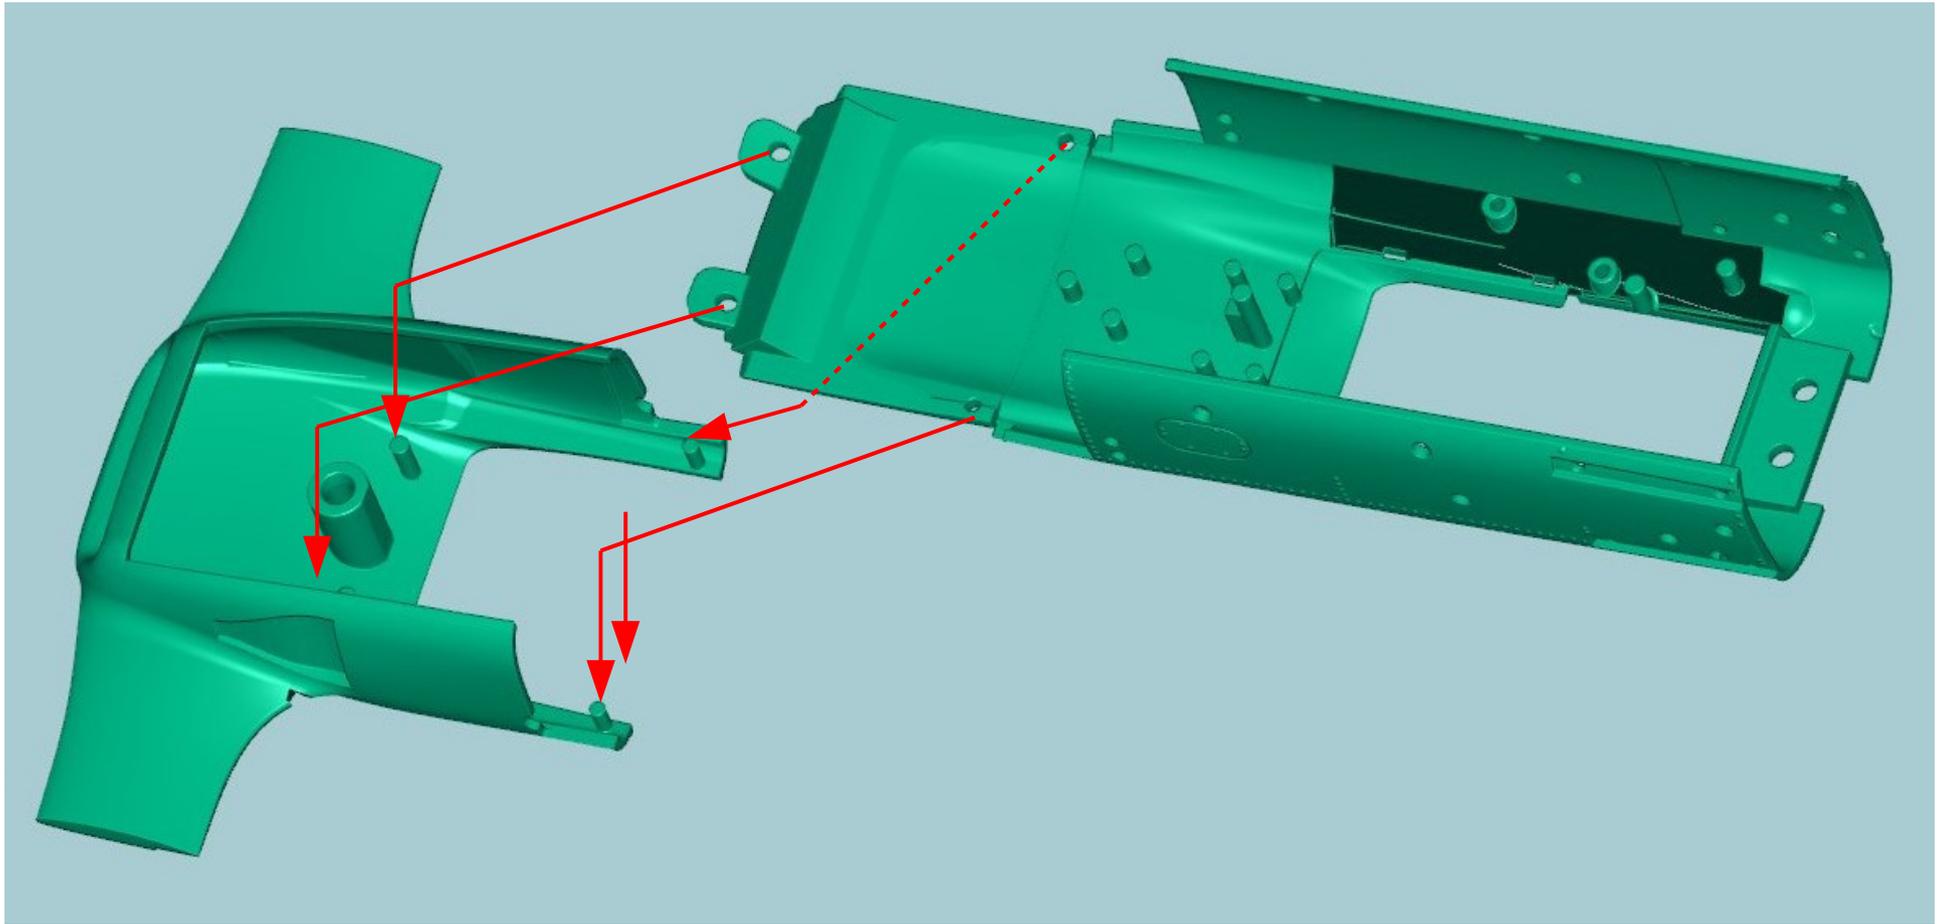


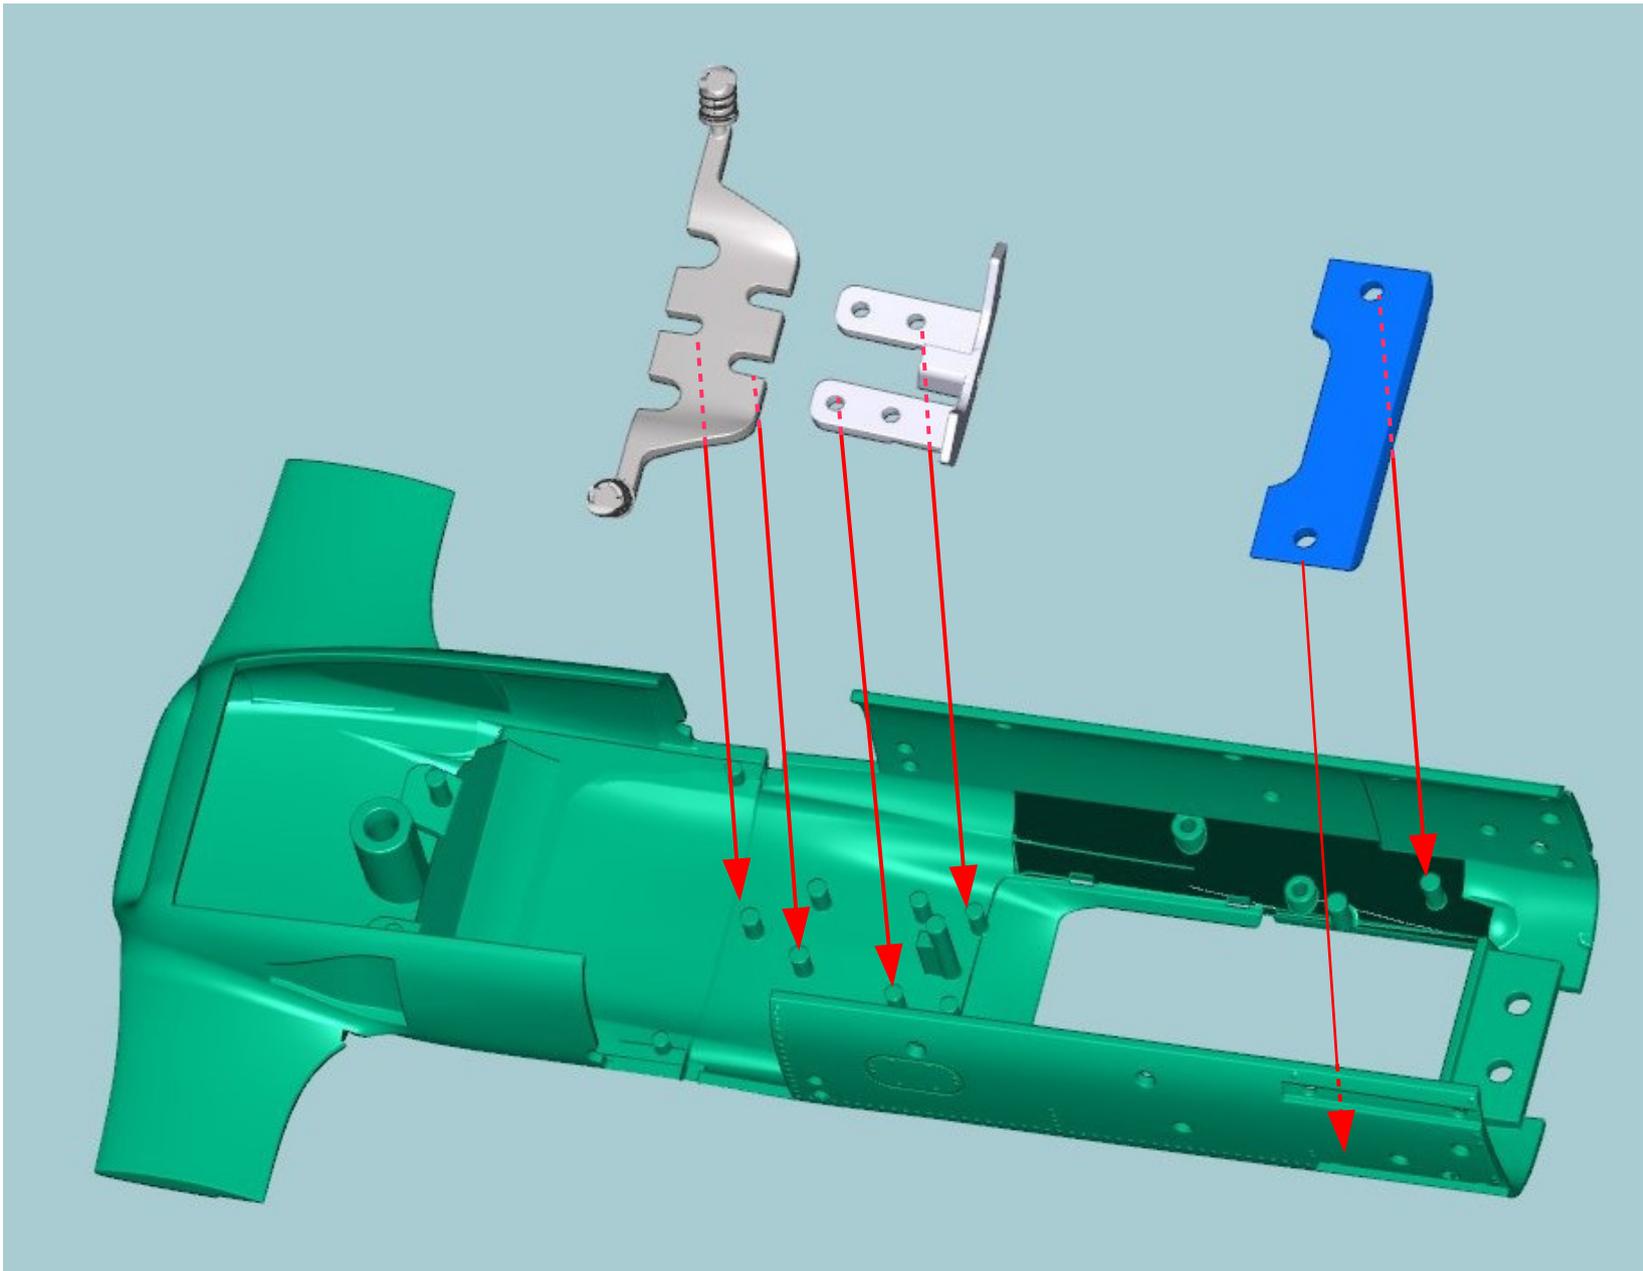


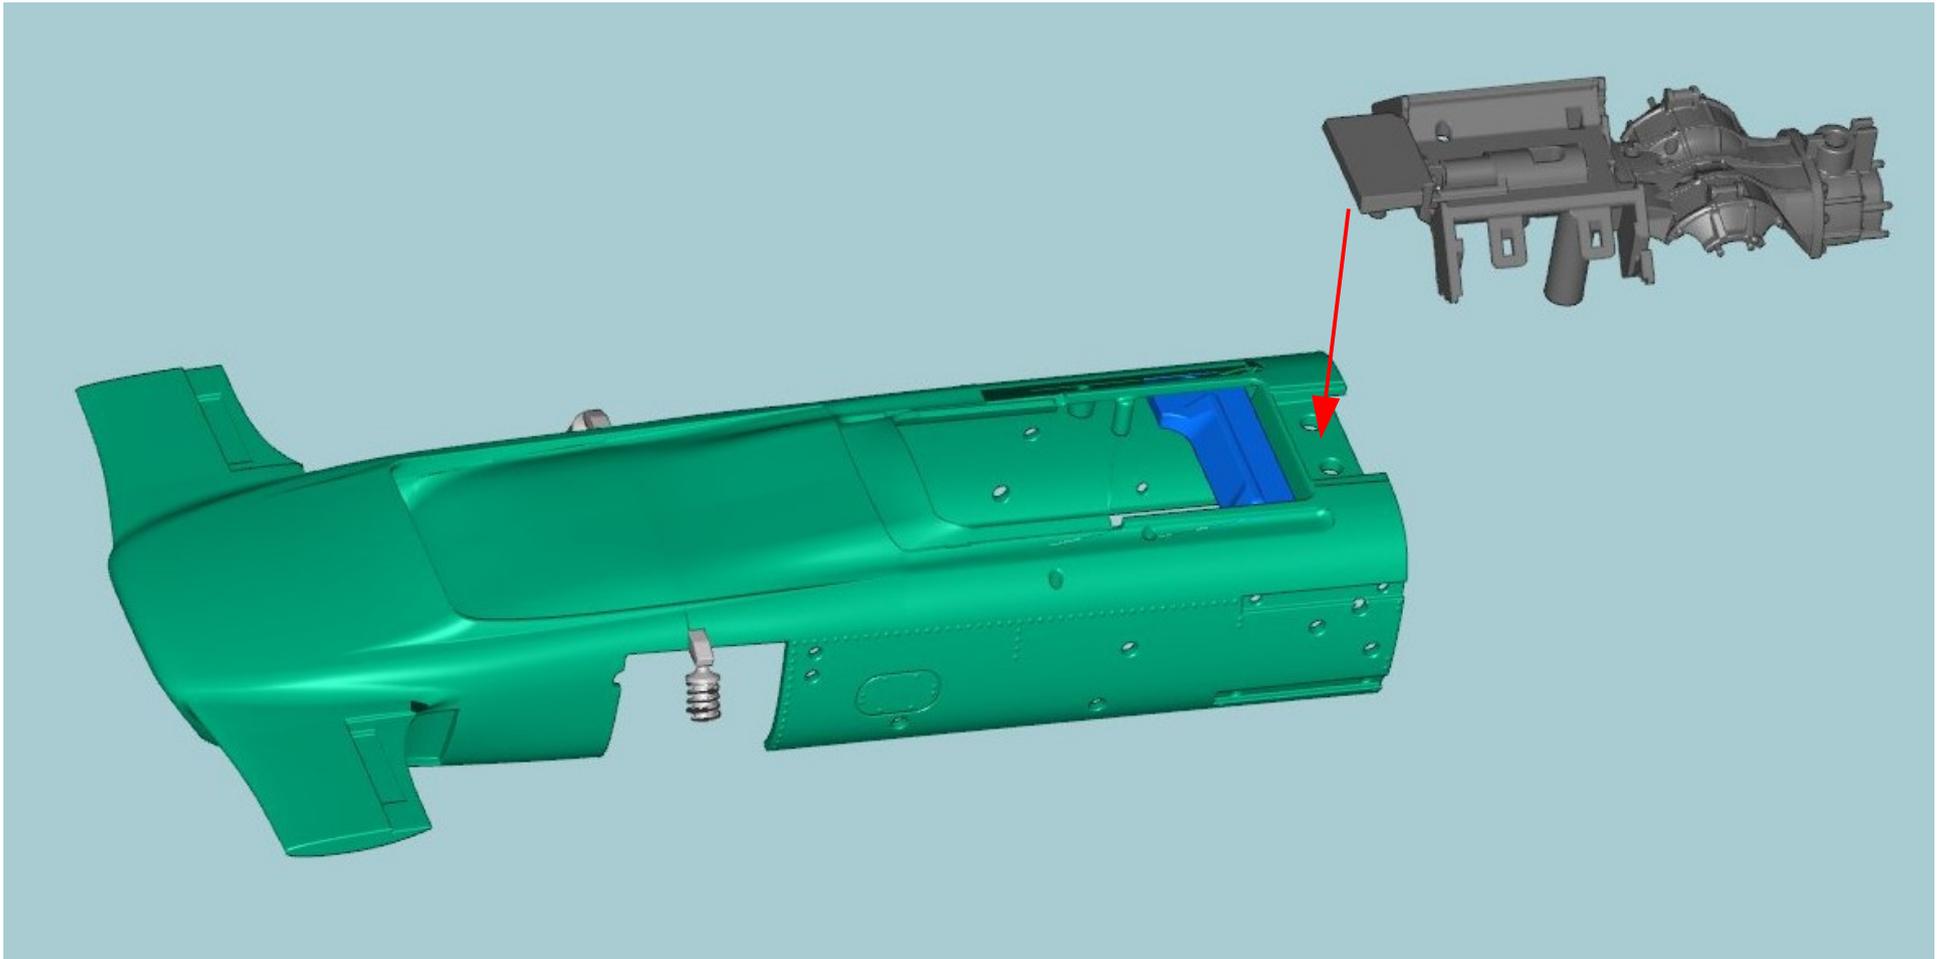


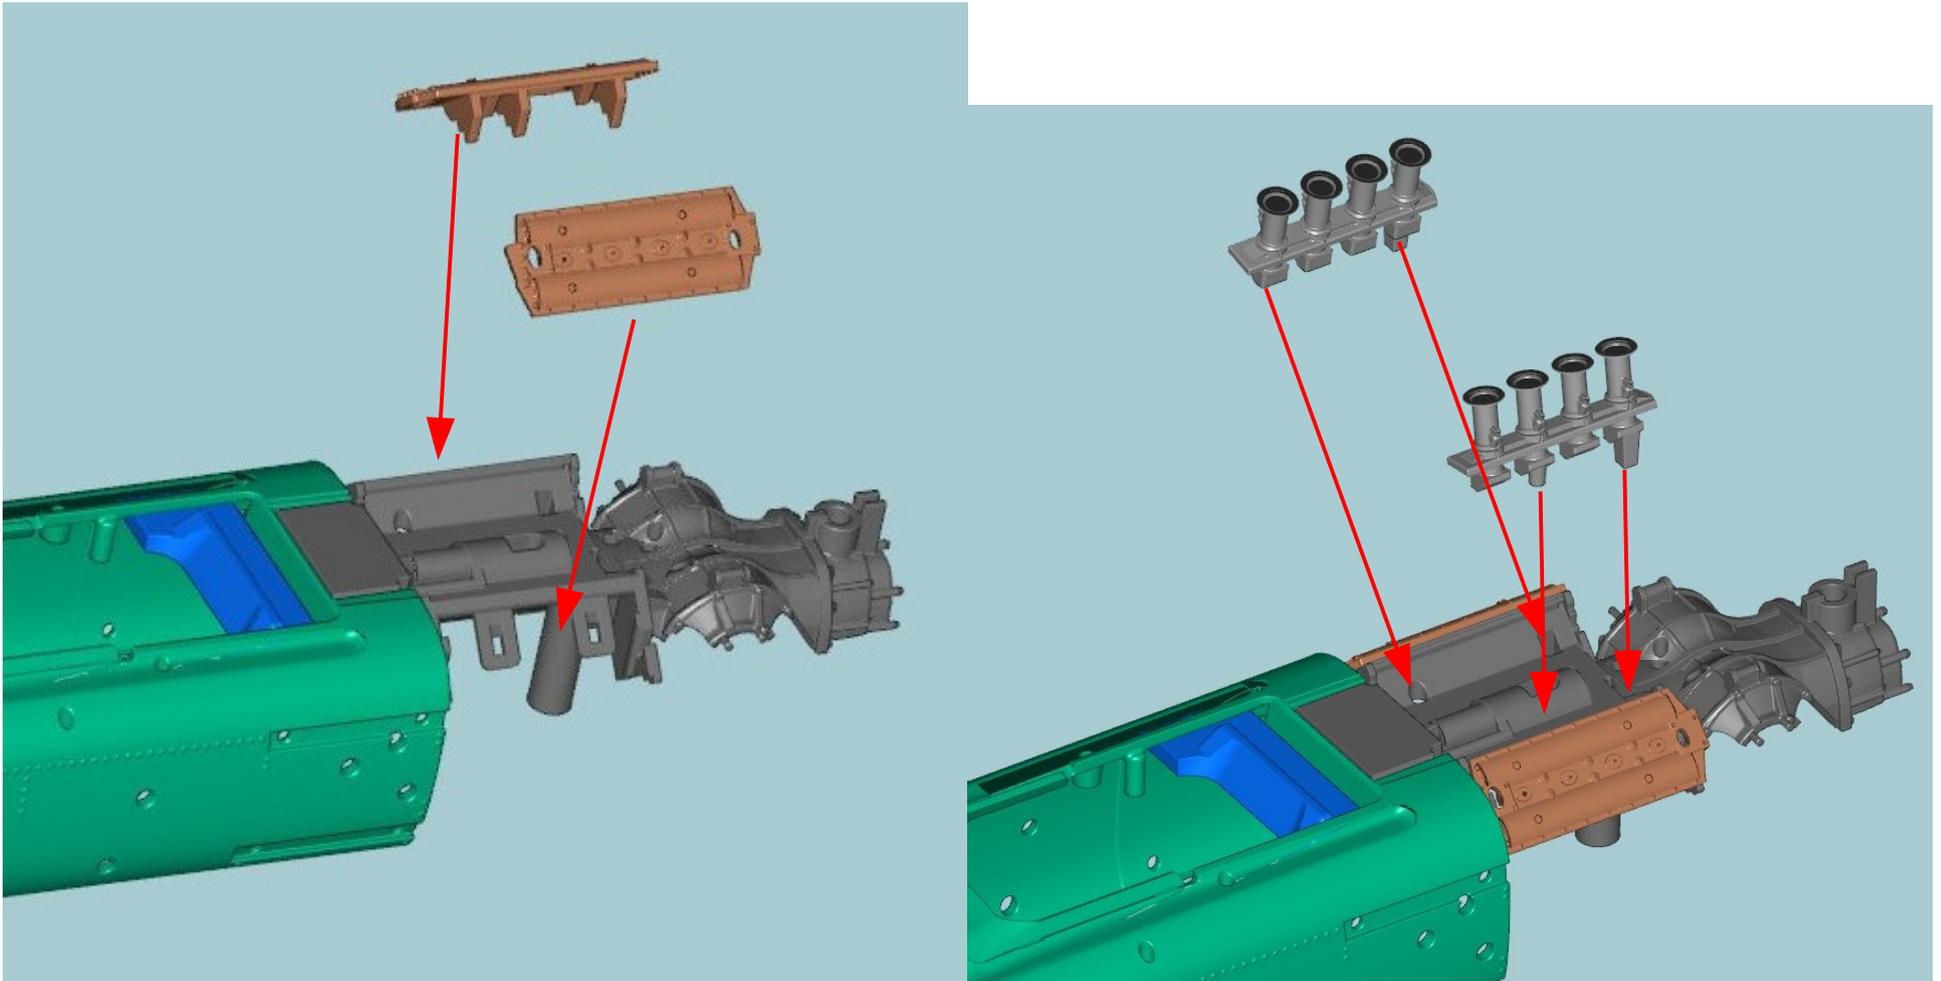


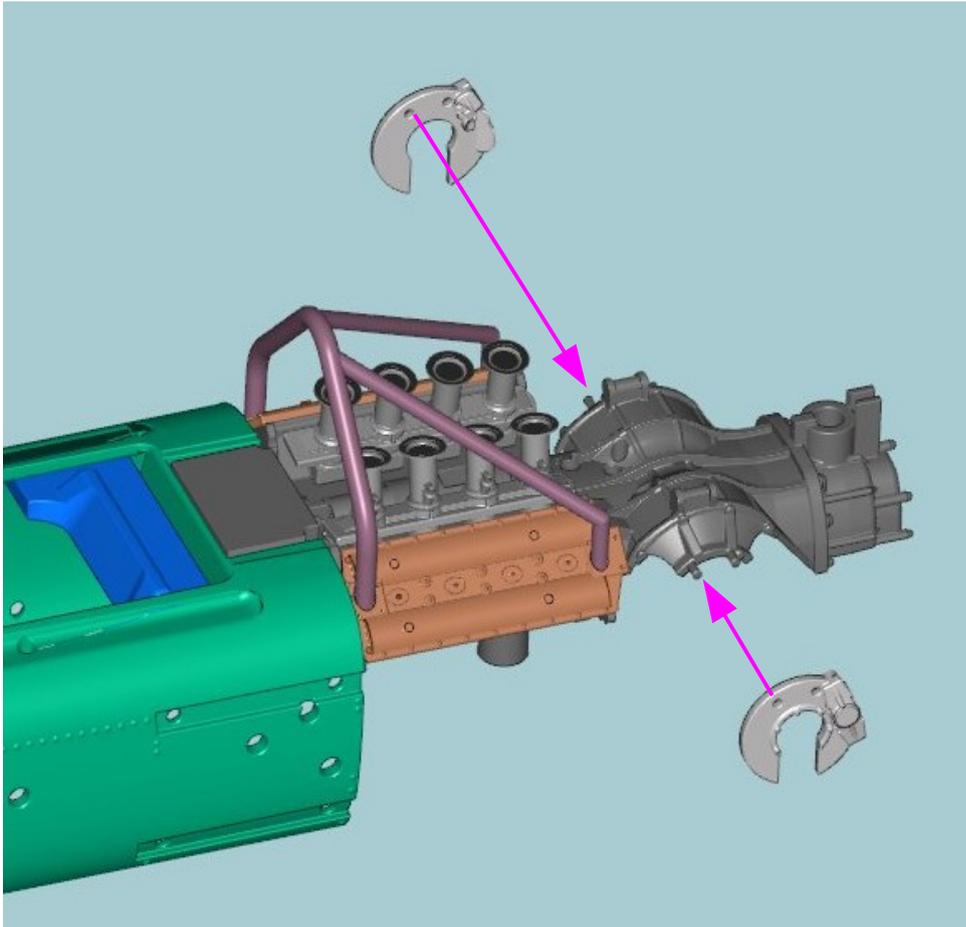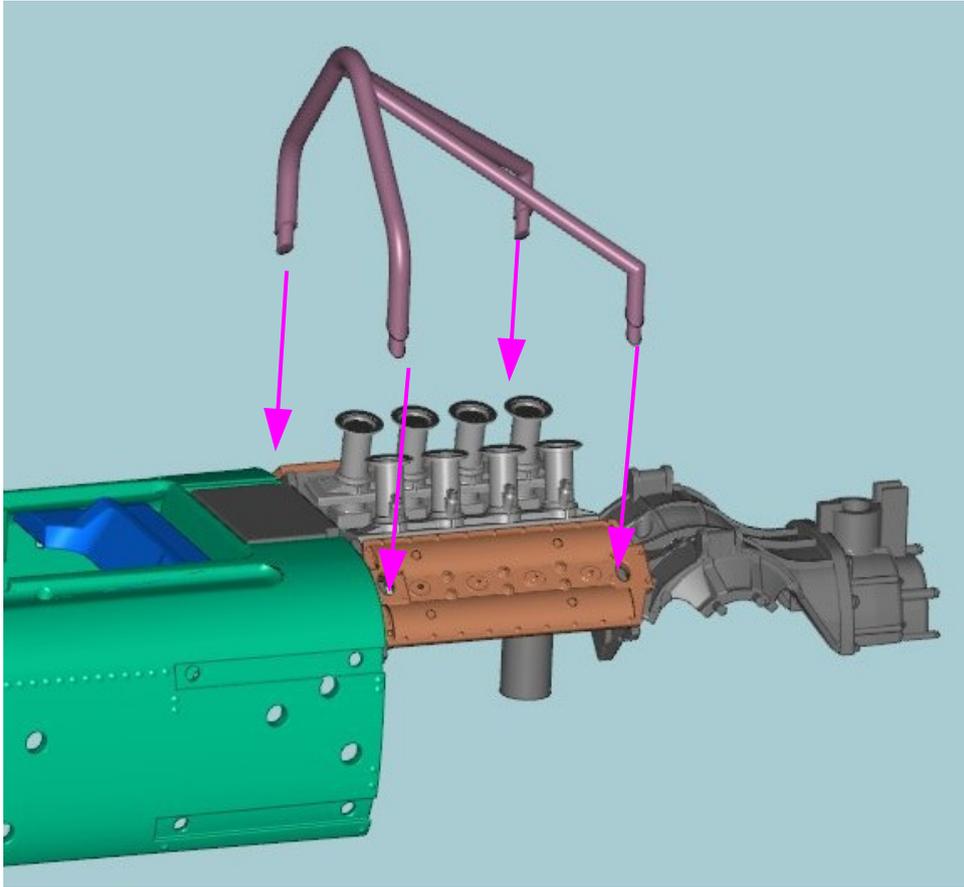


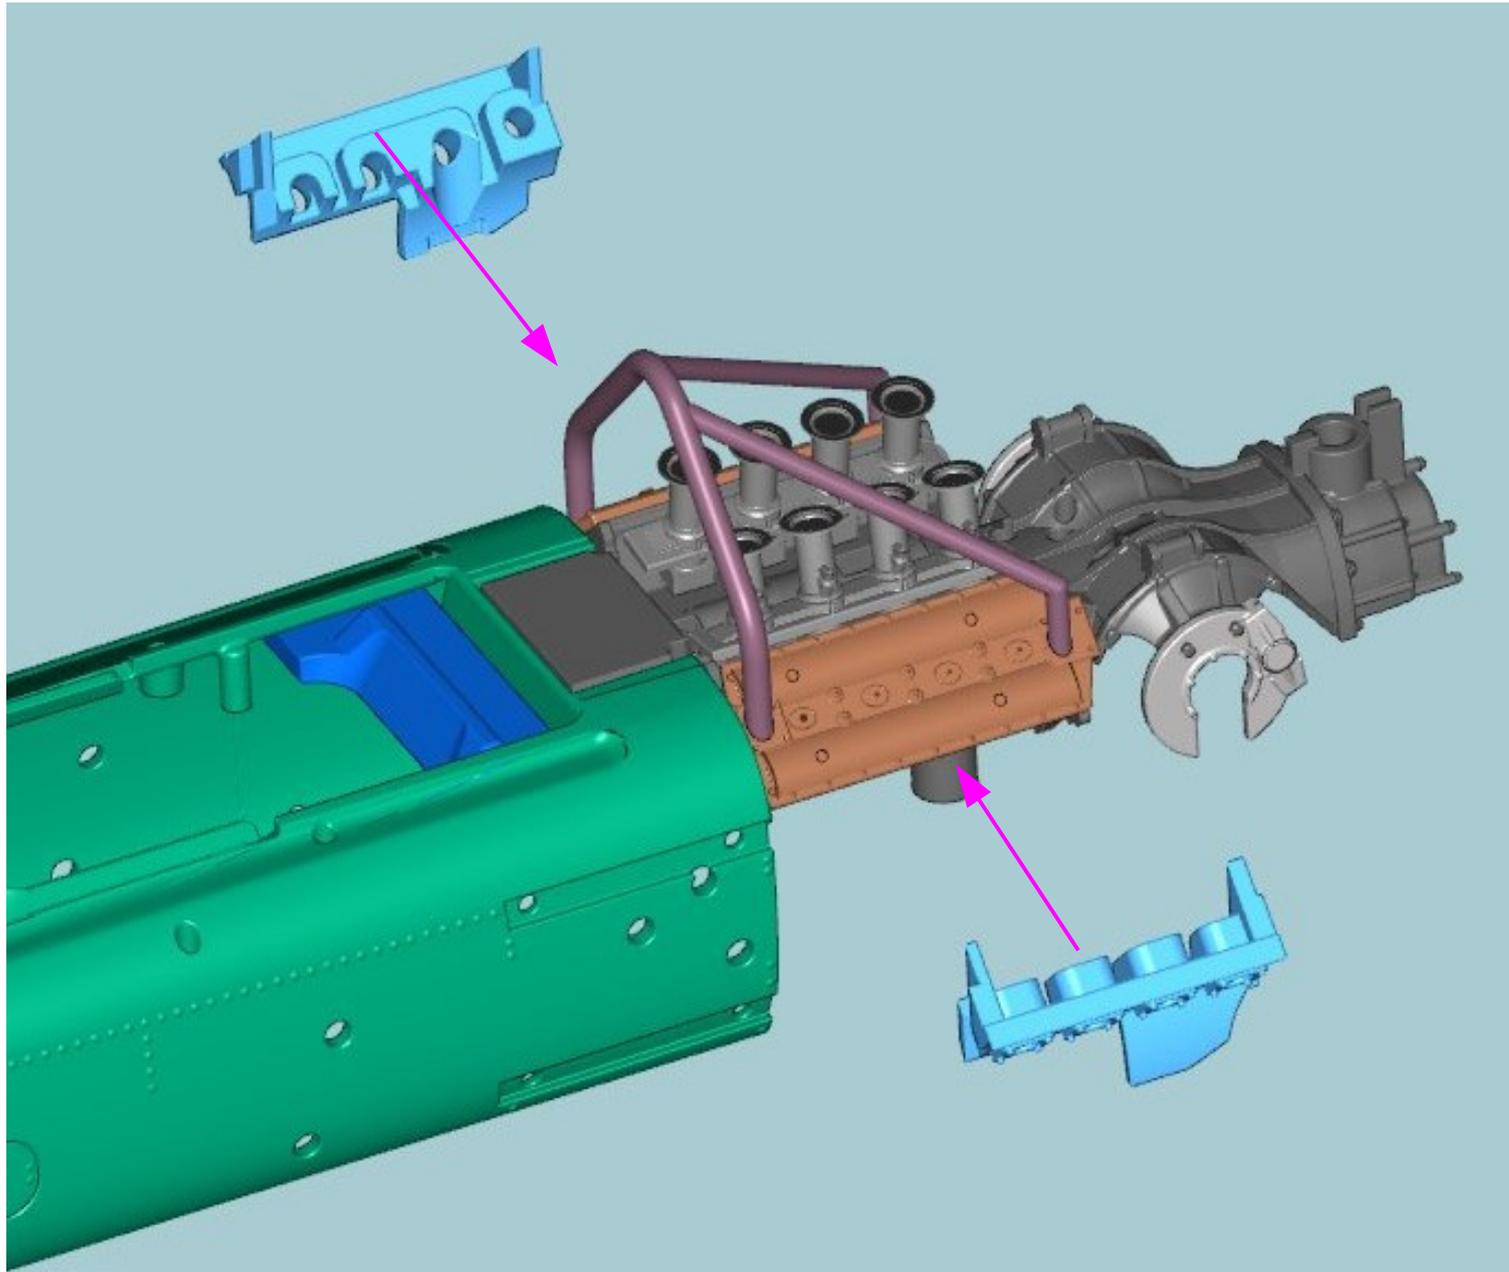


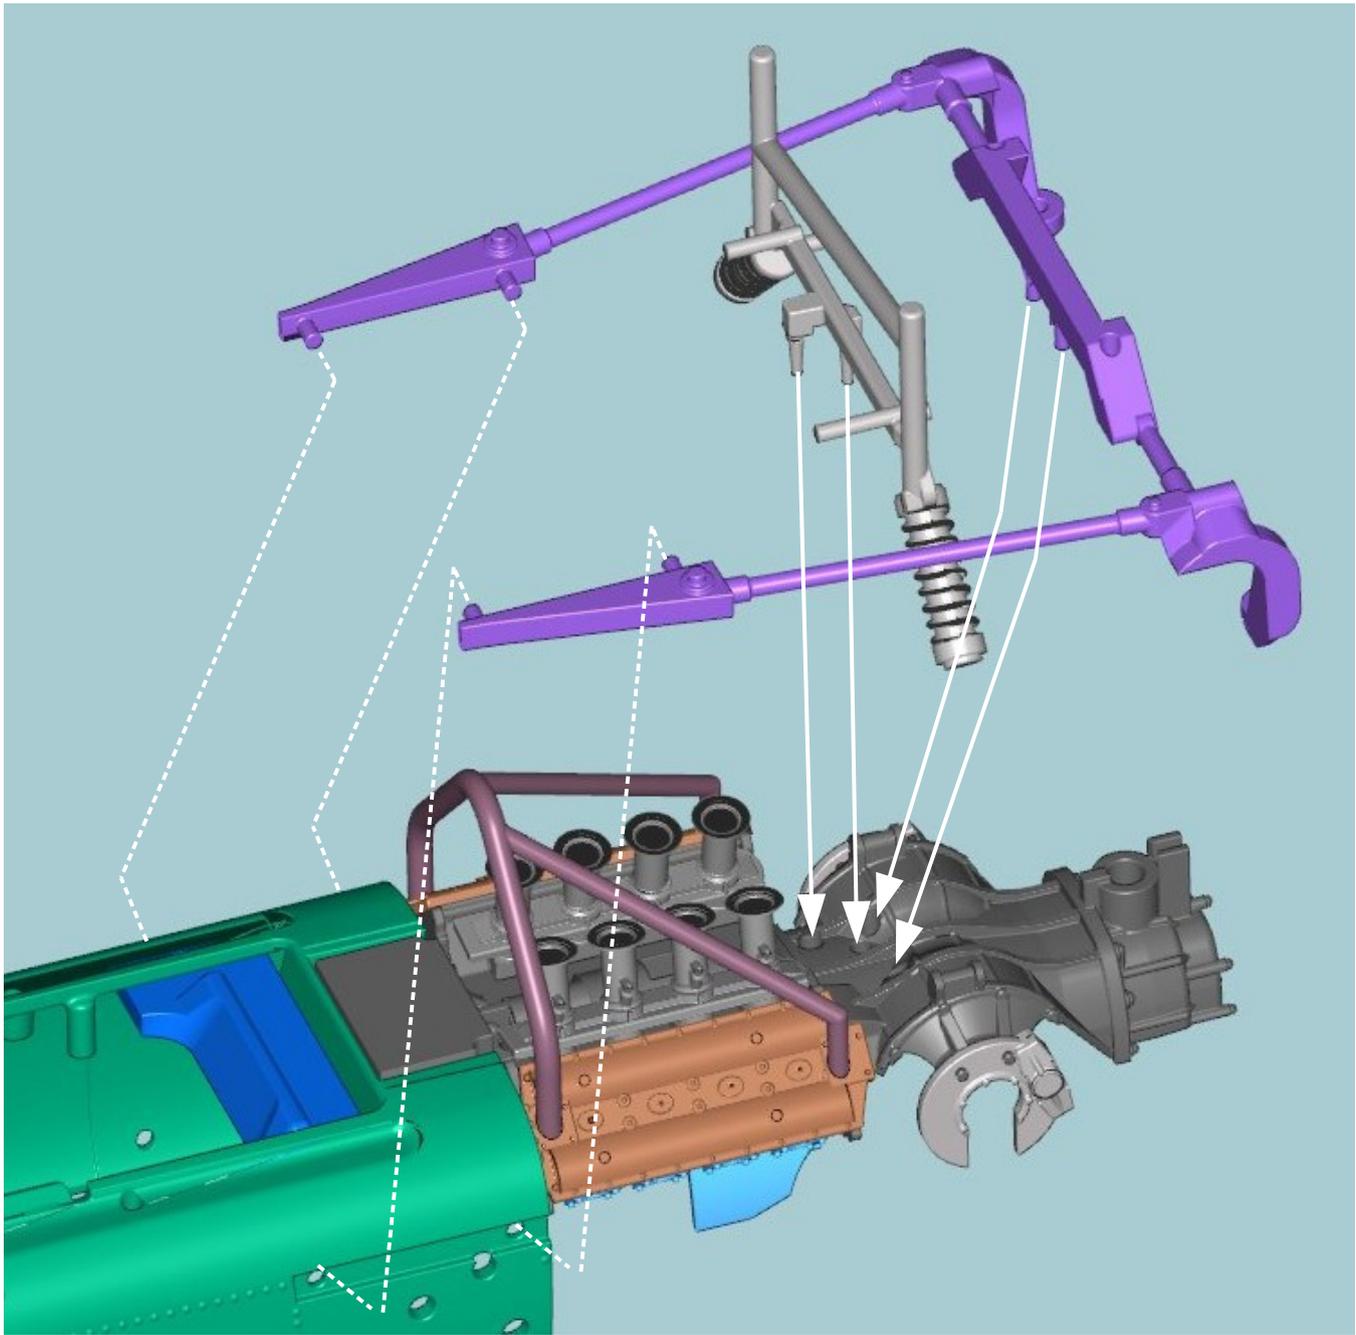


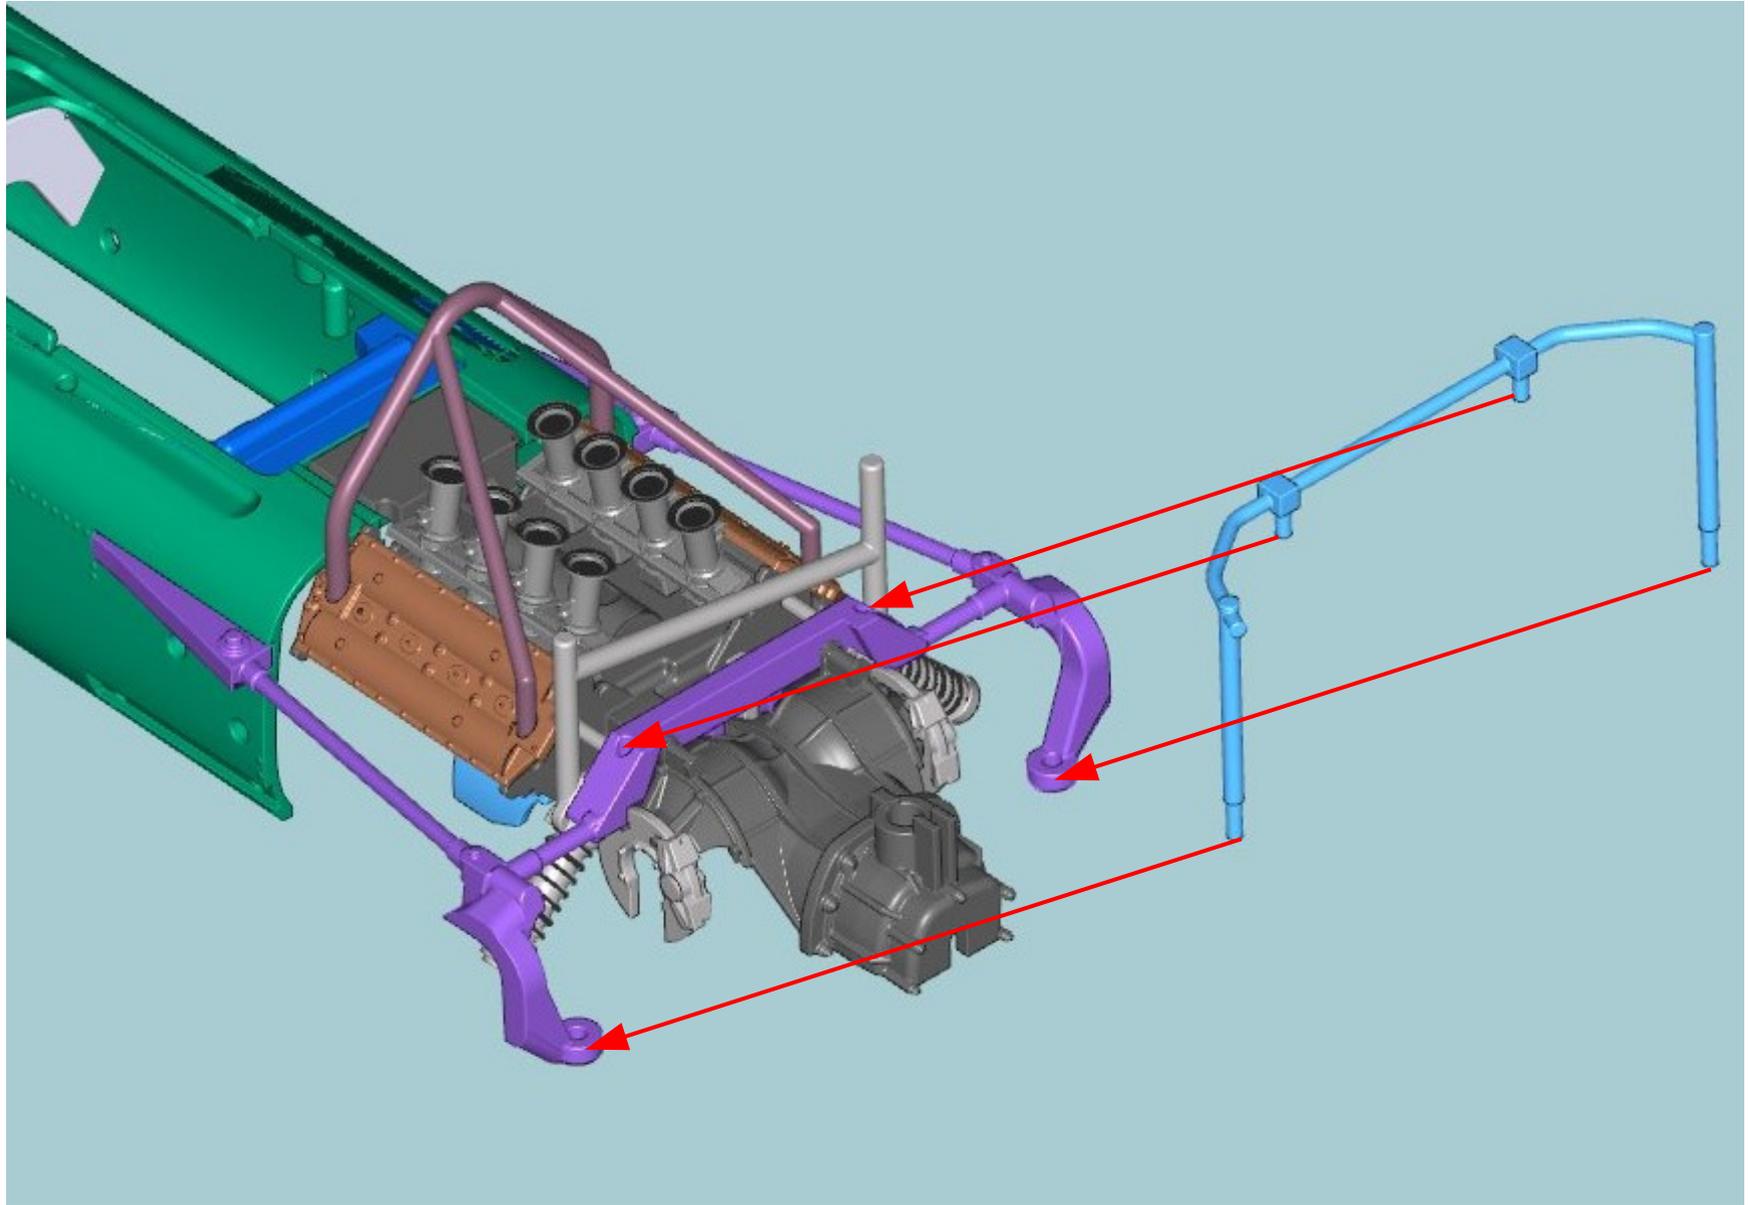


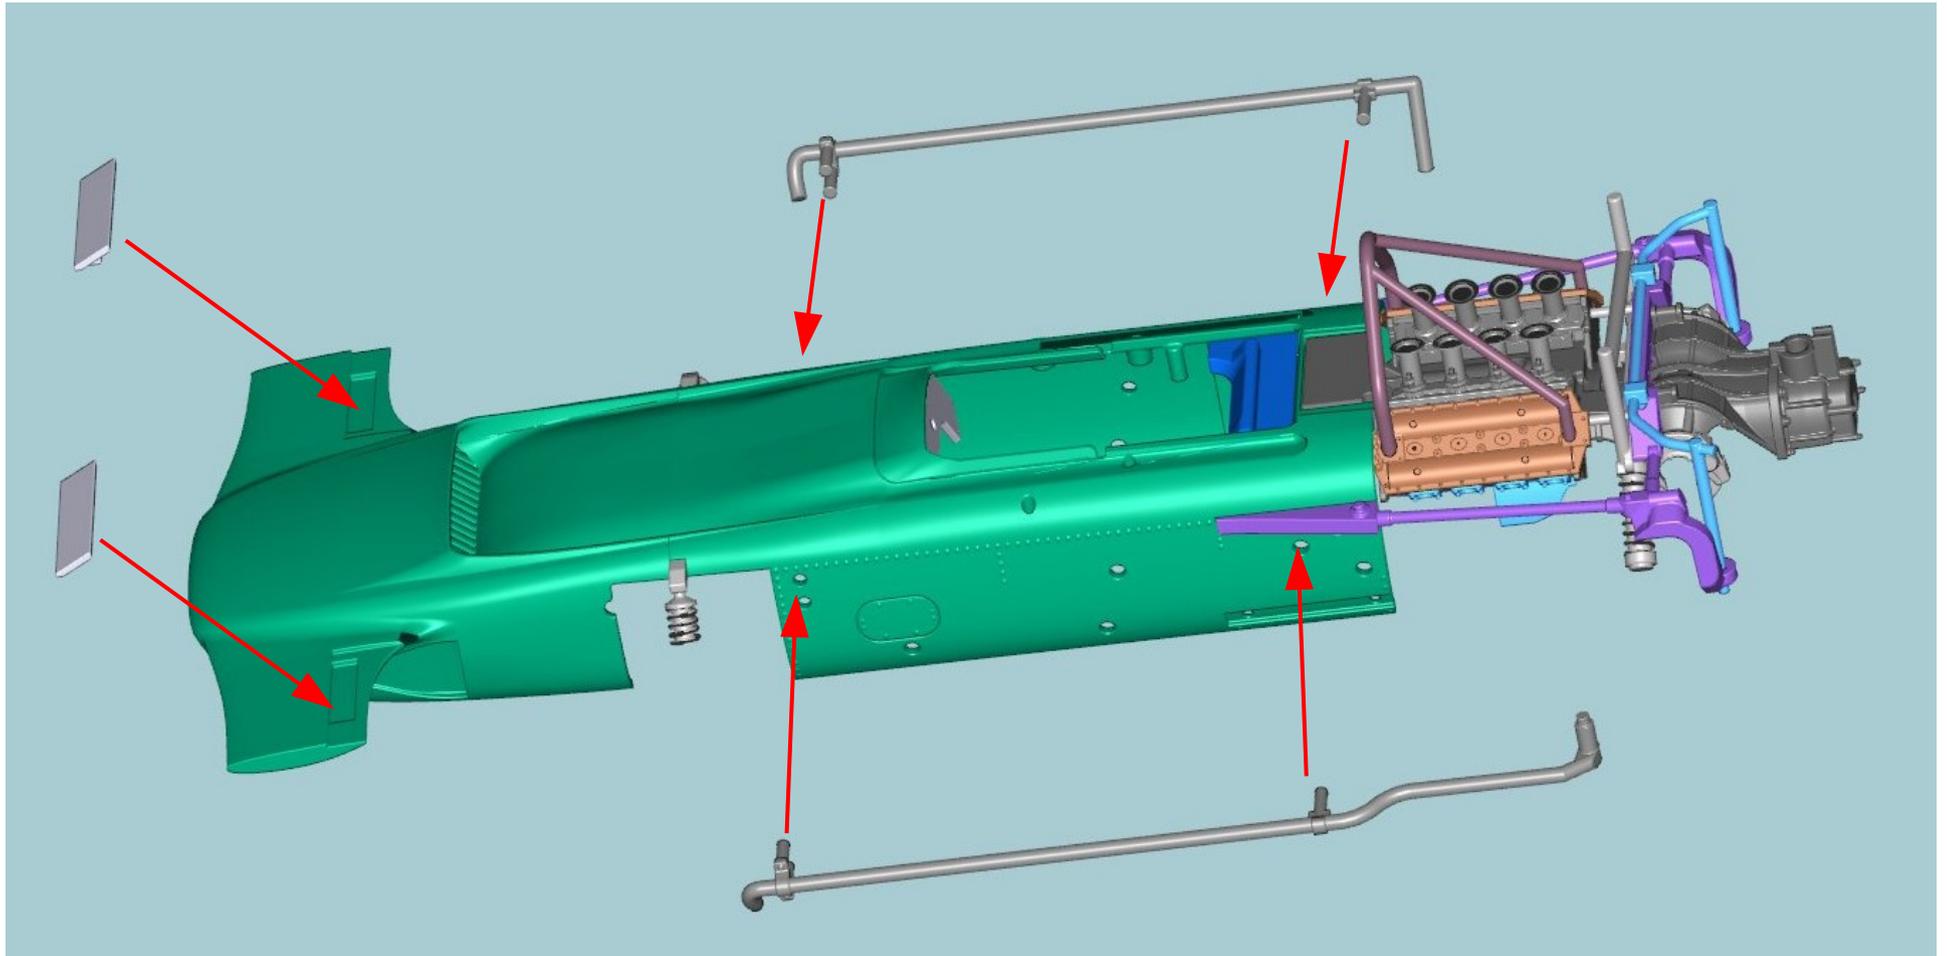


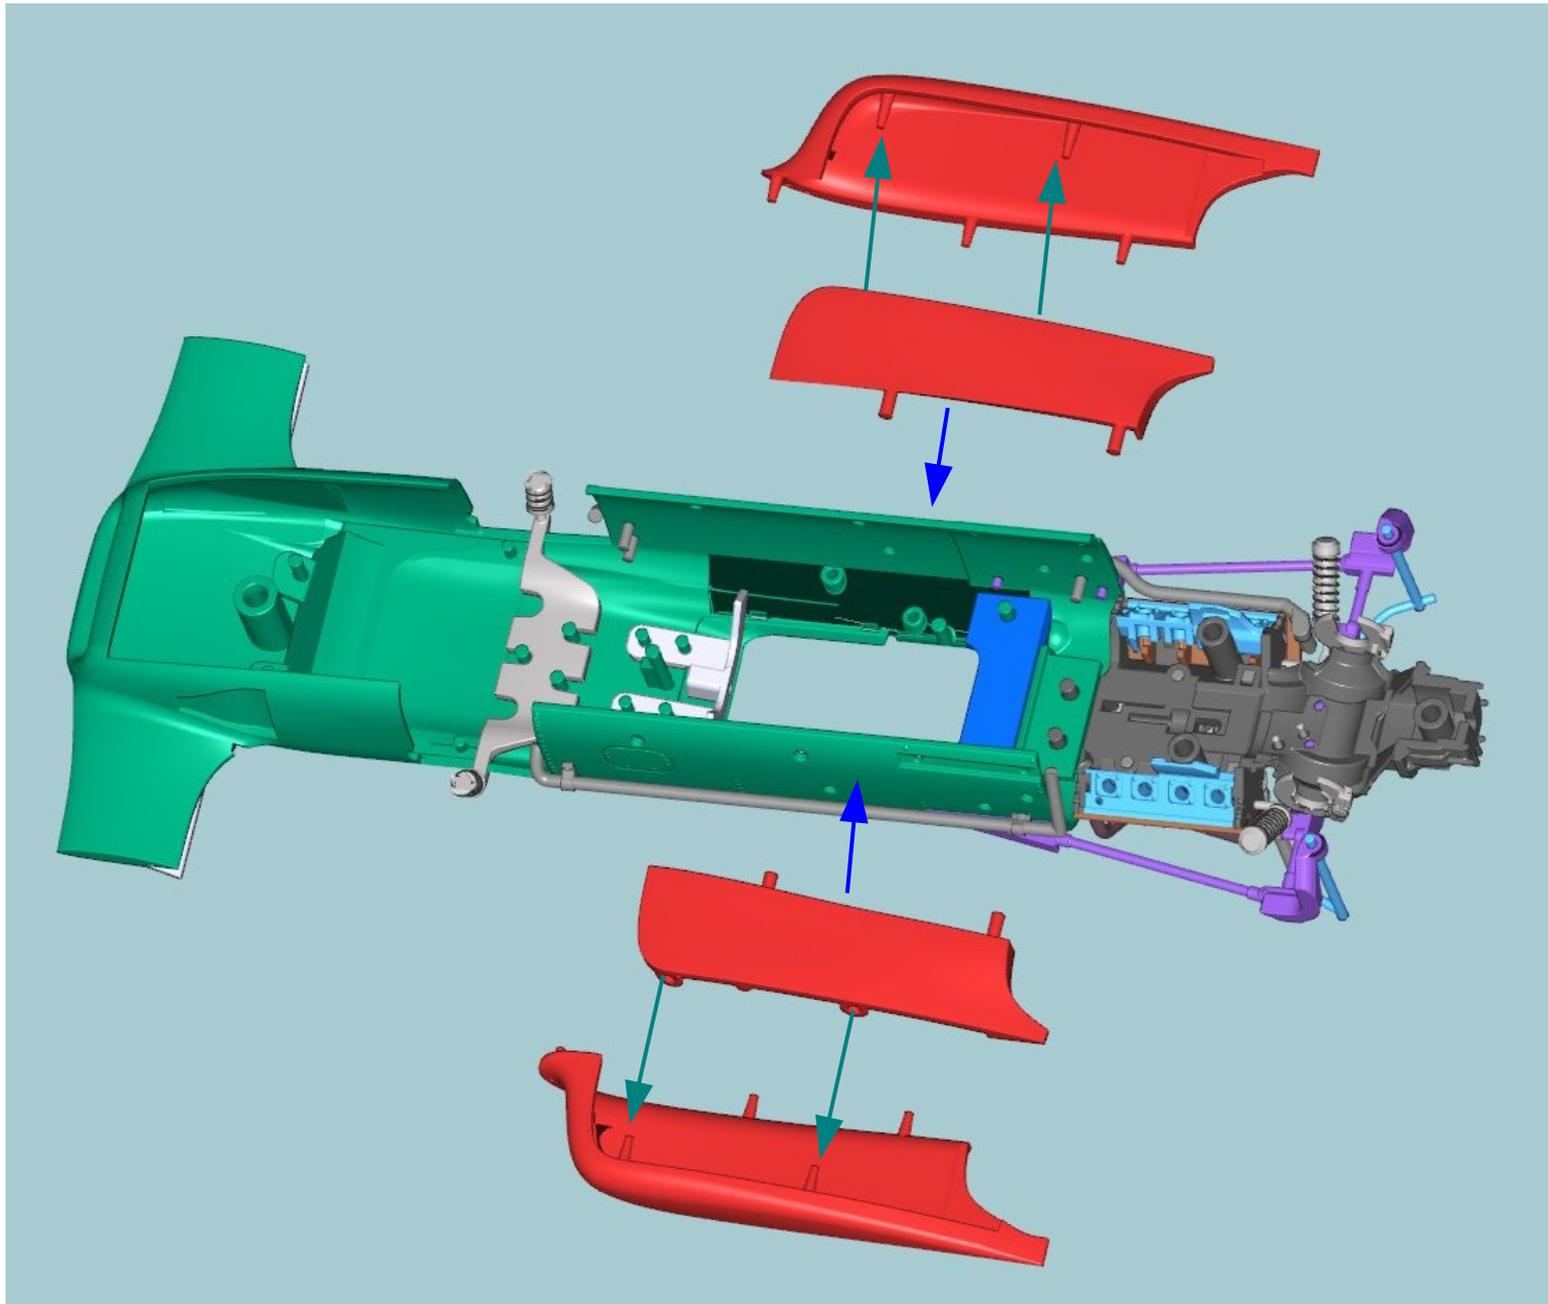

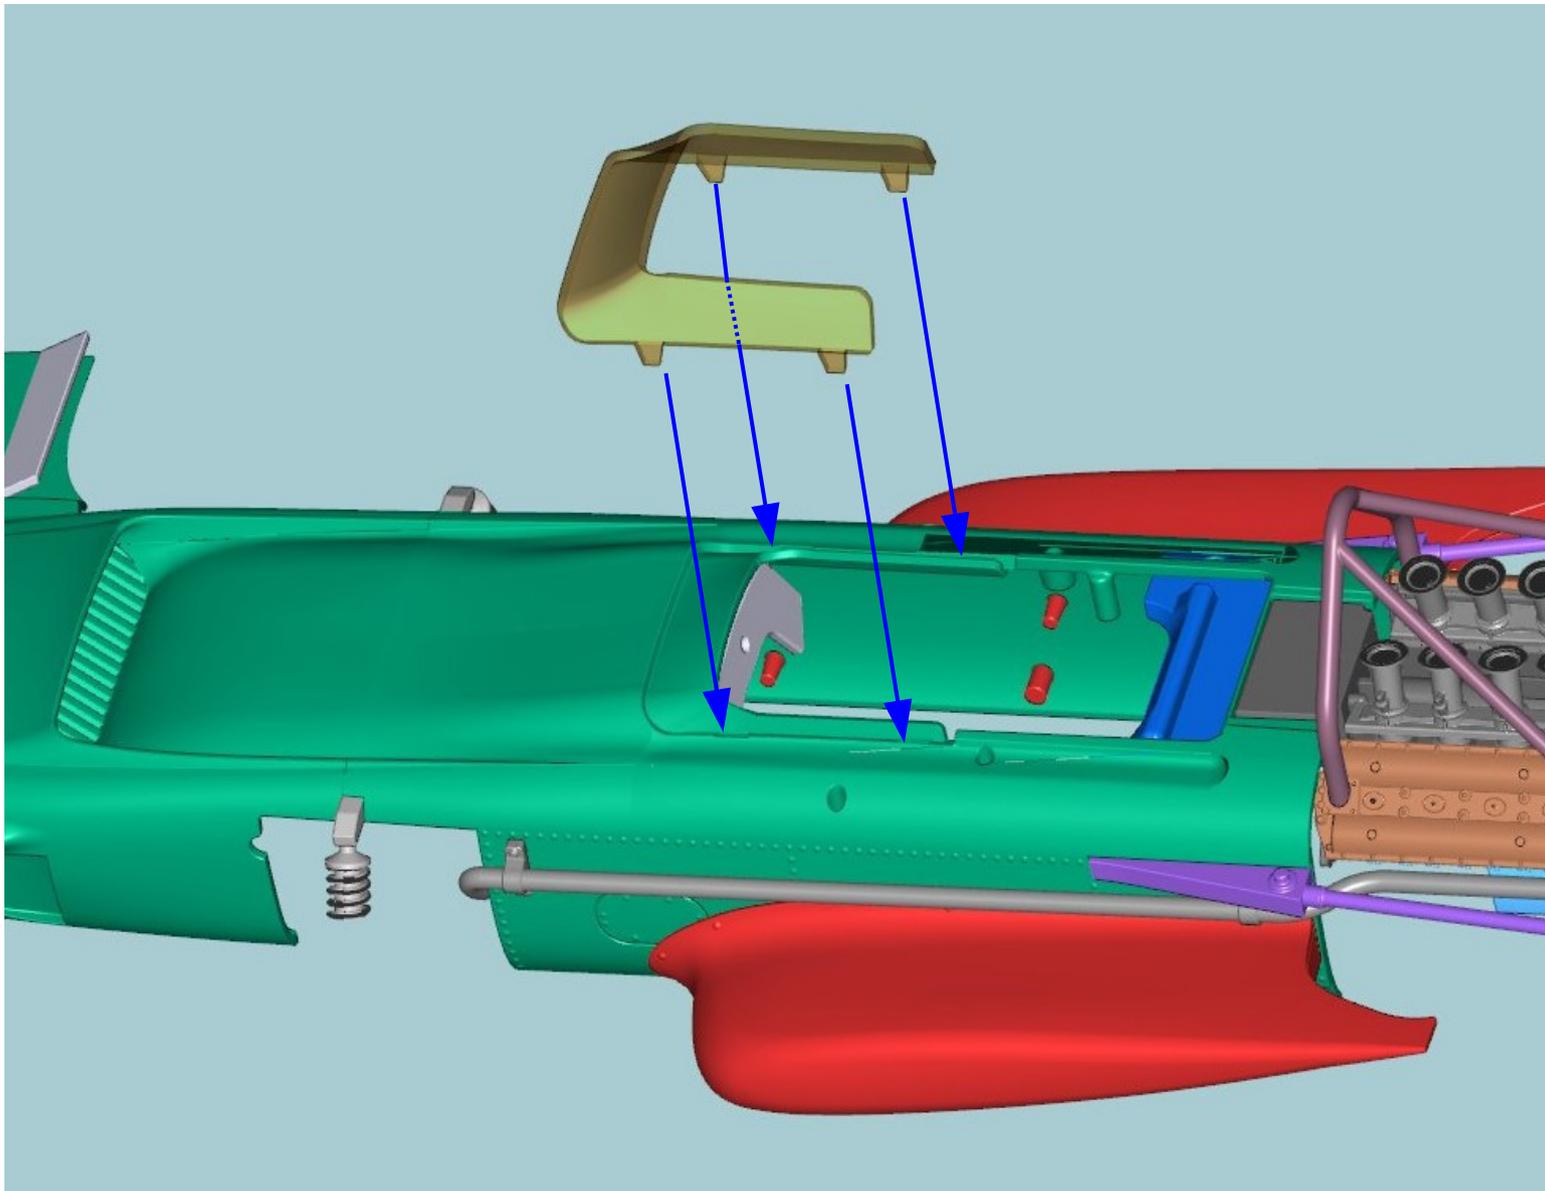


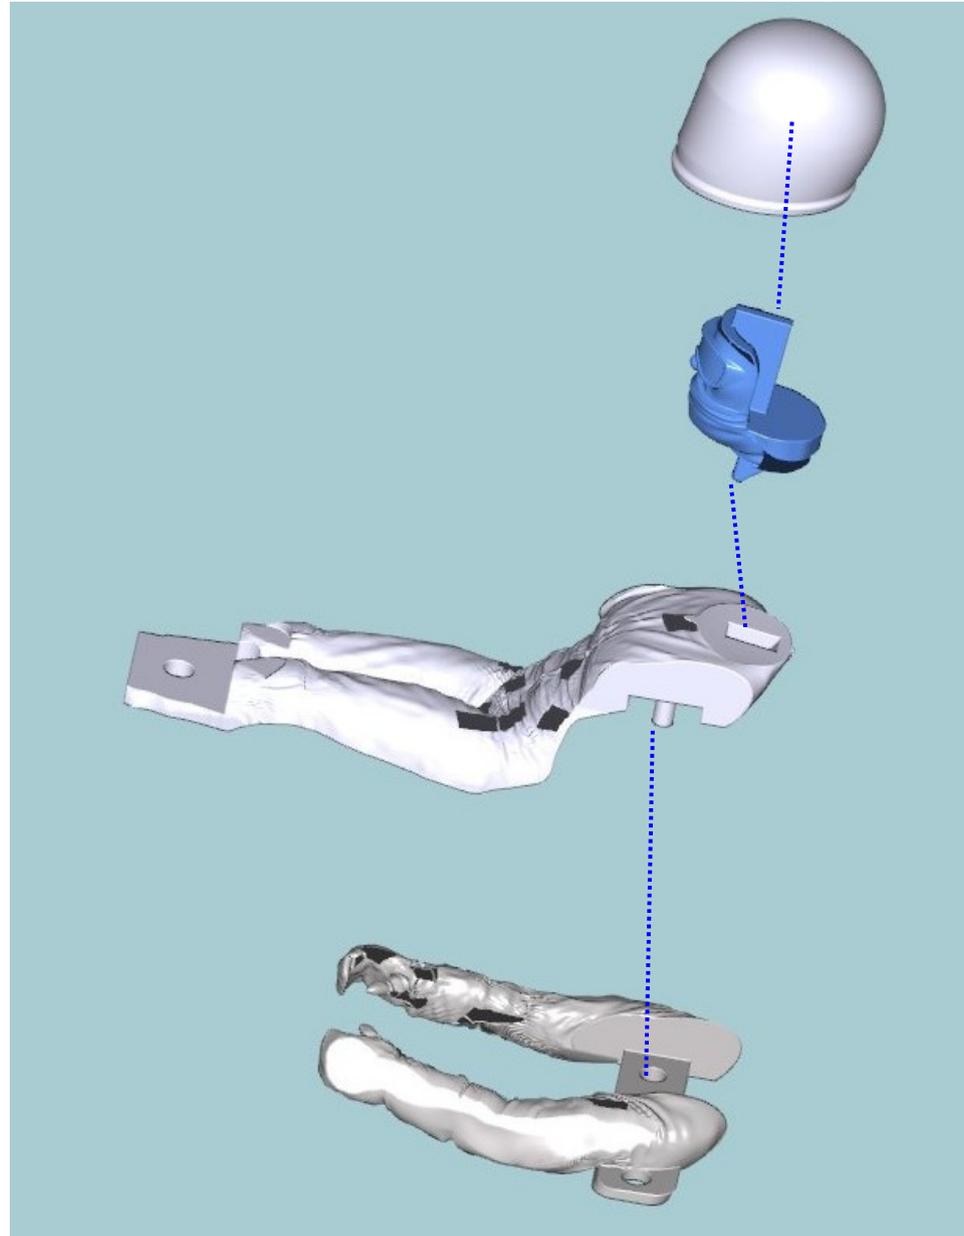

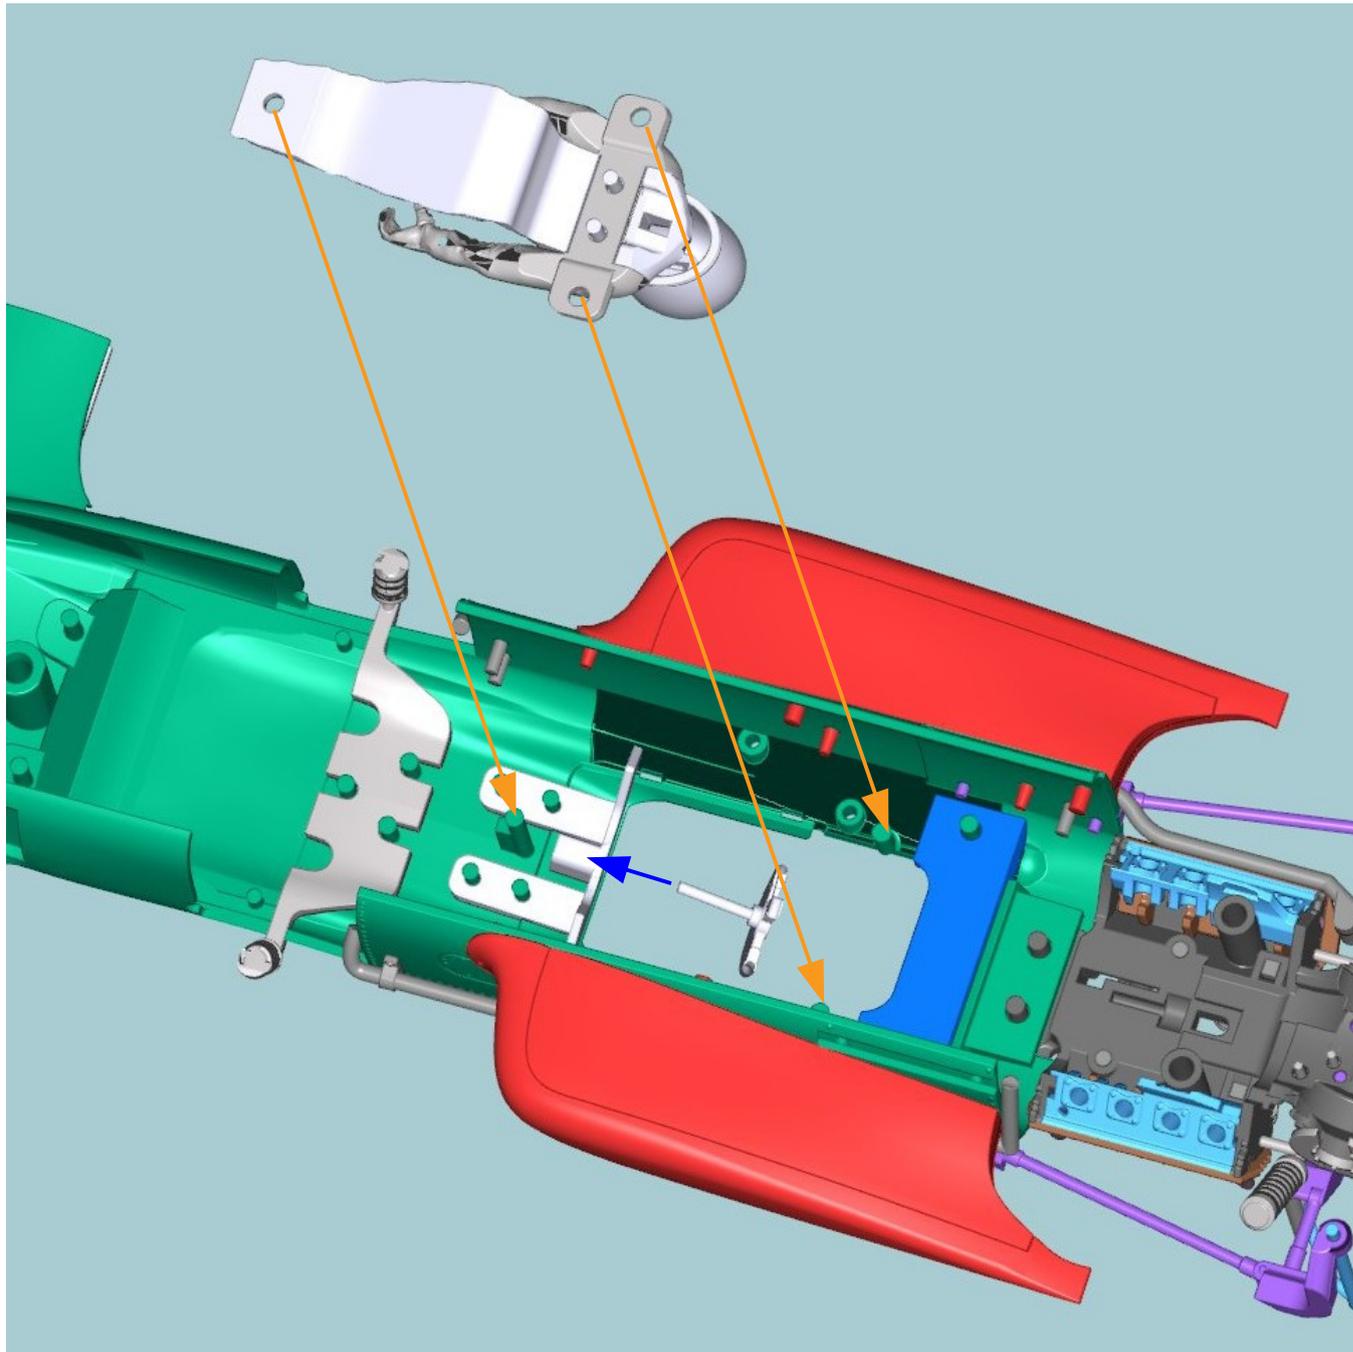


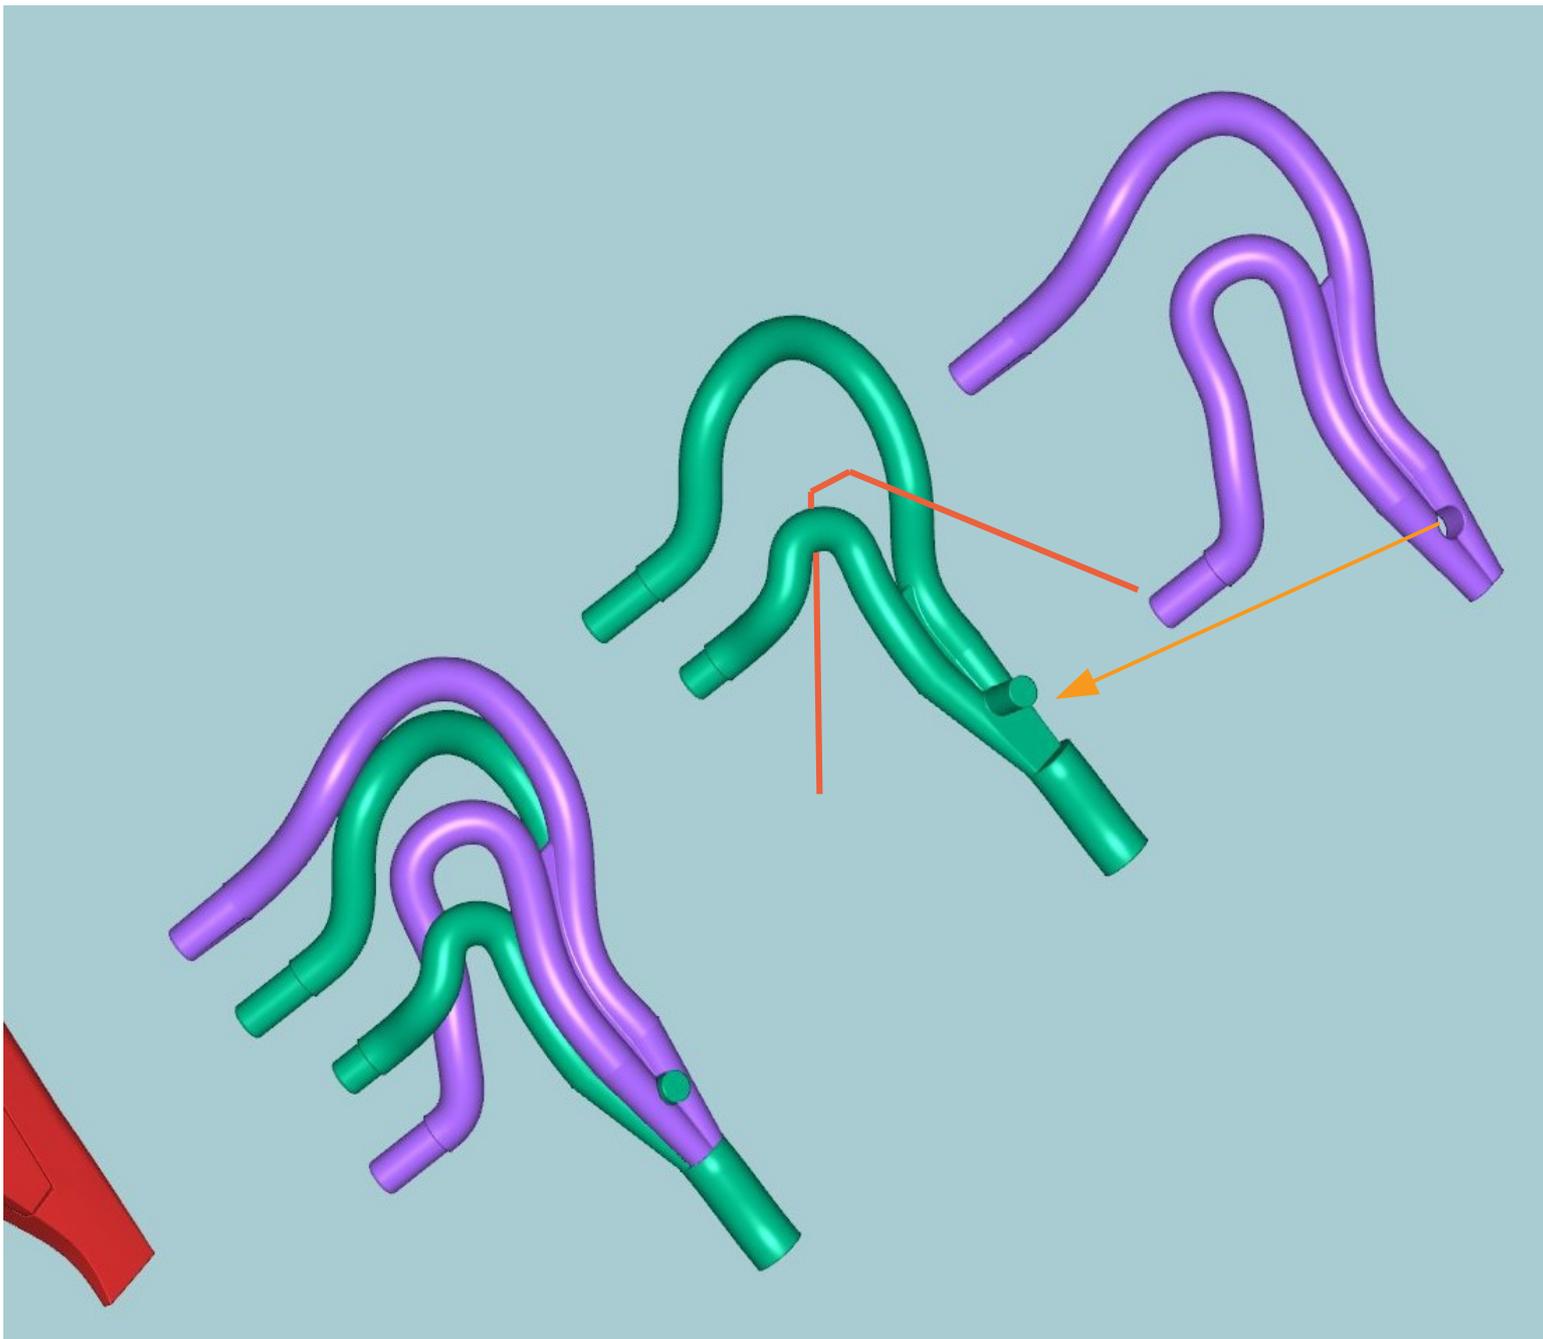




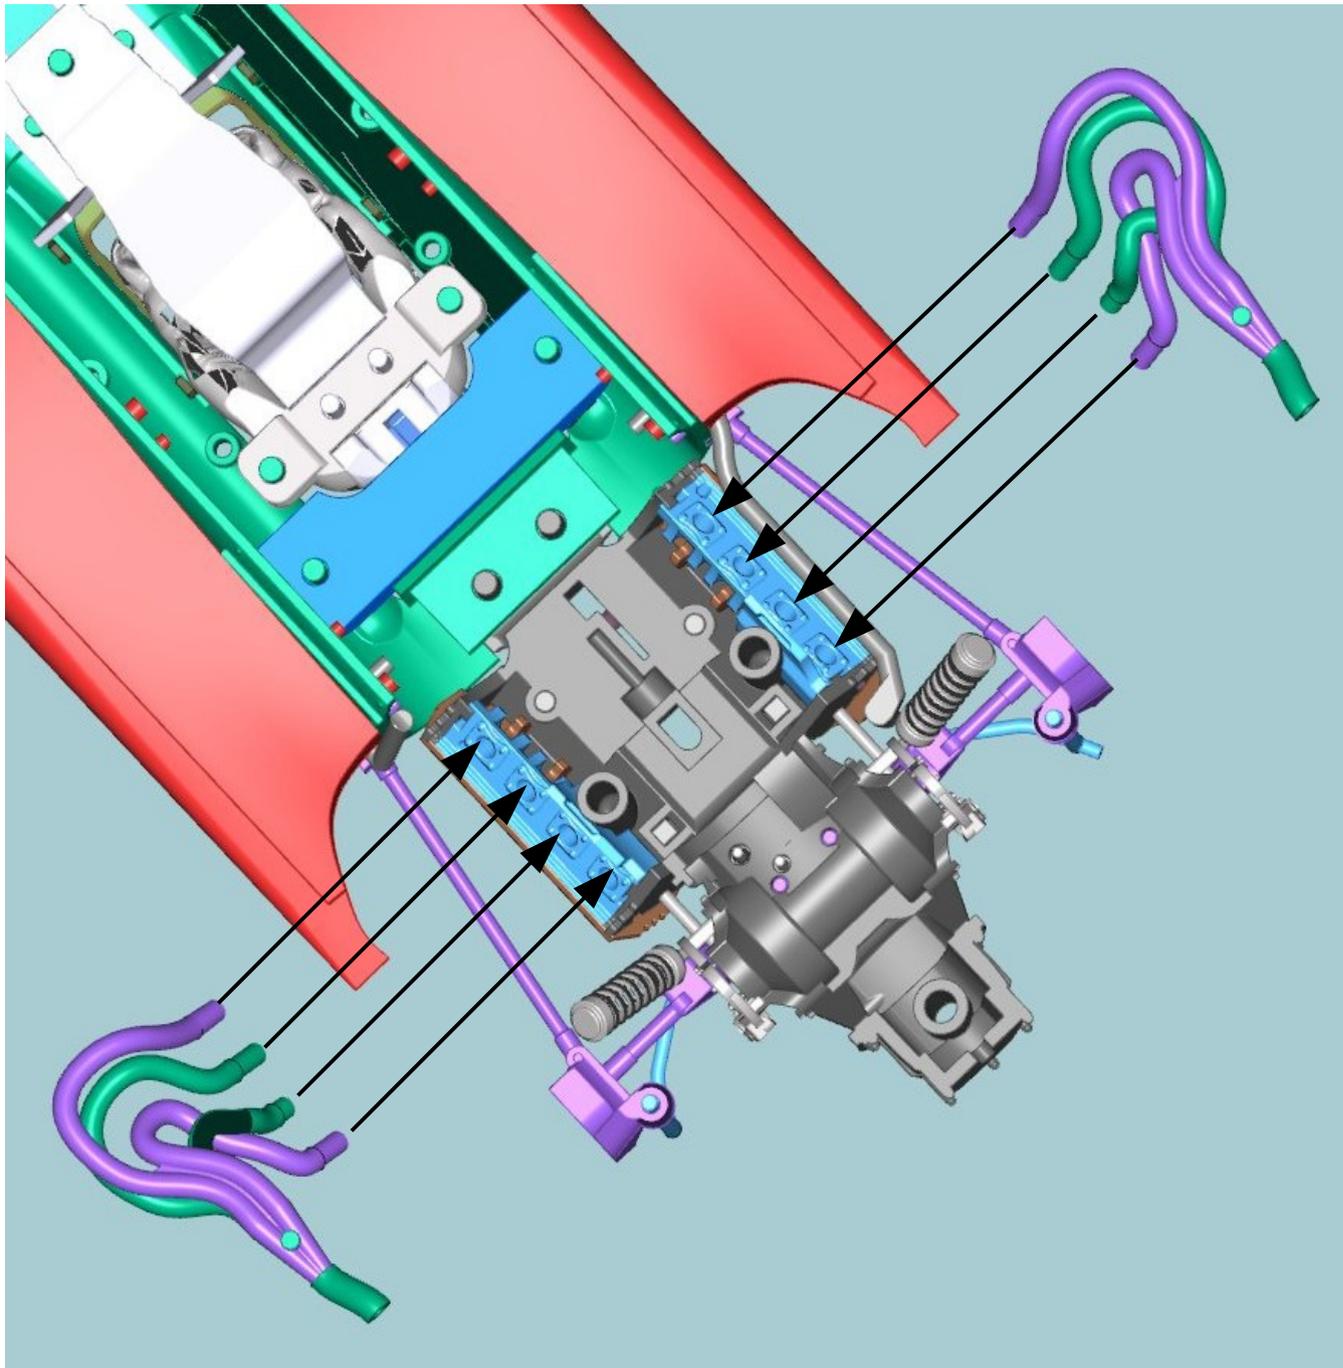



OK

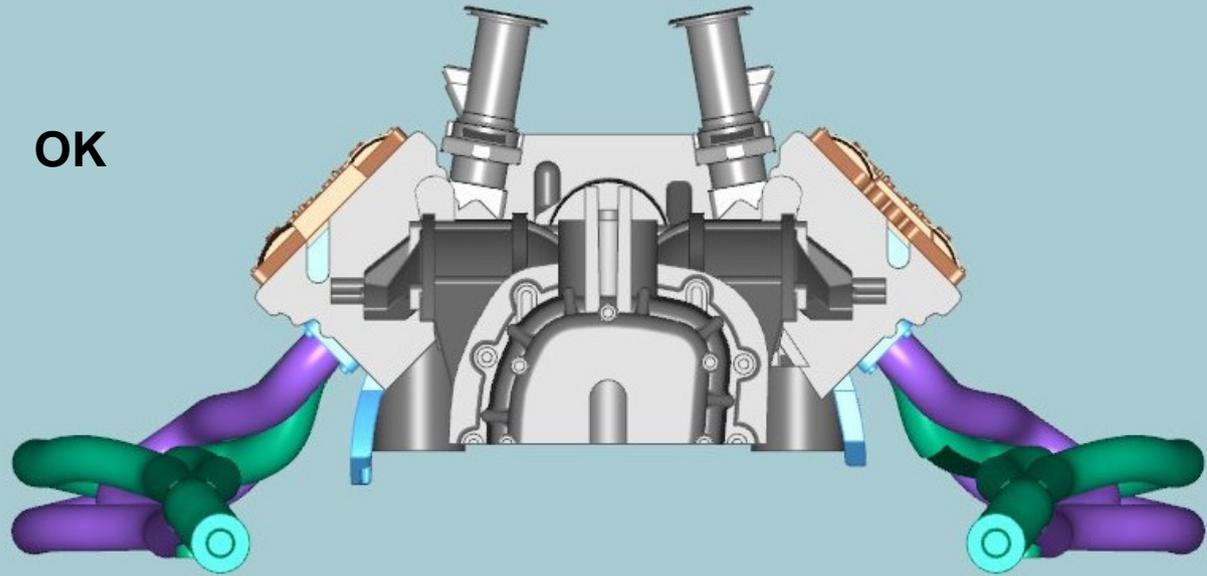



NO

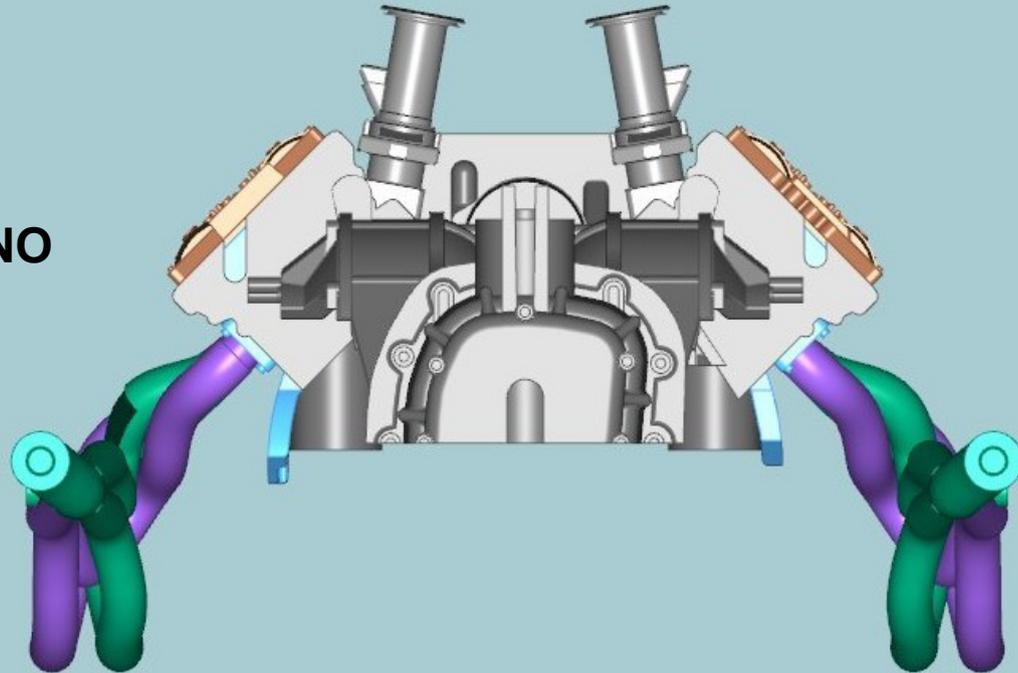


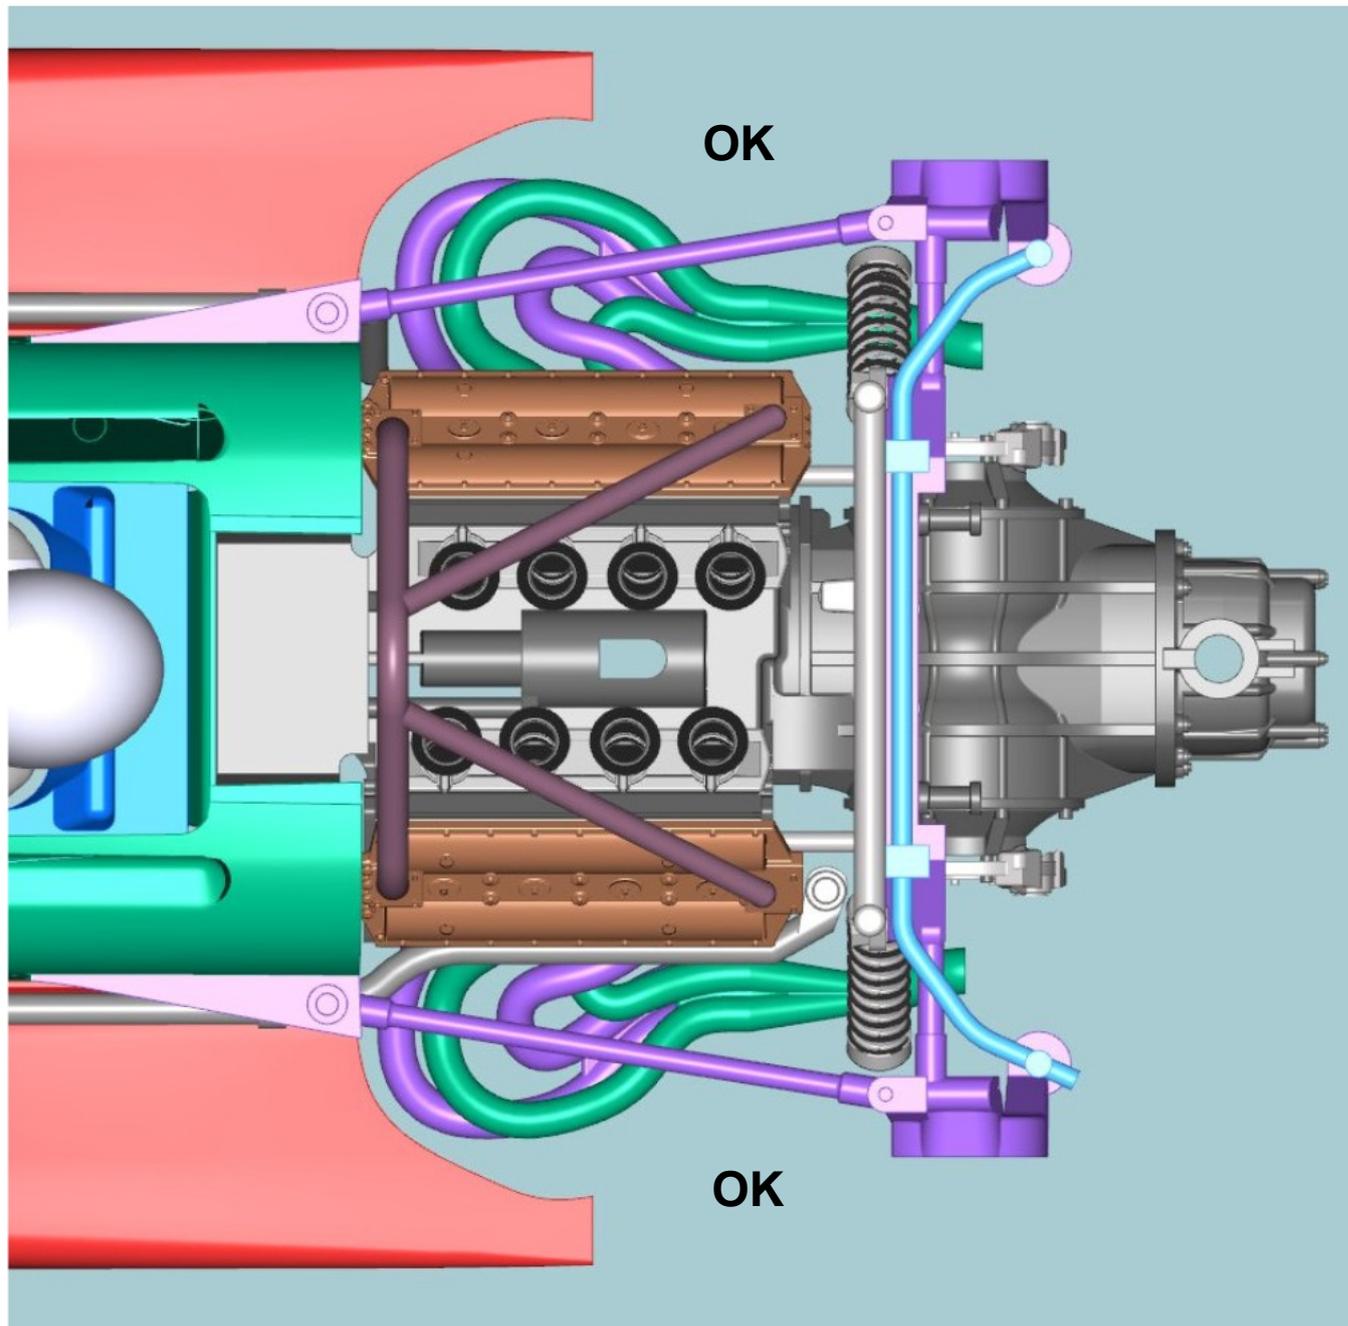

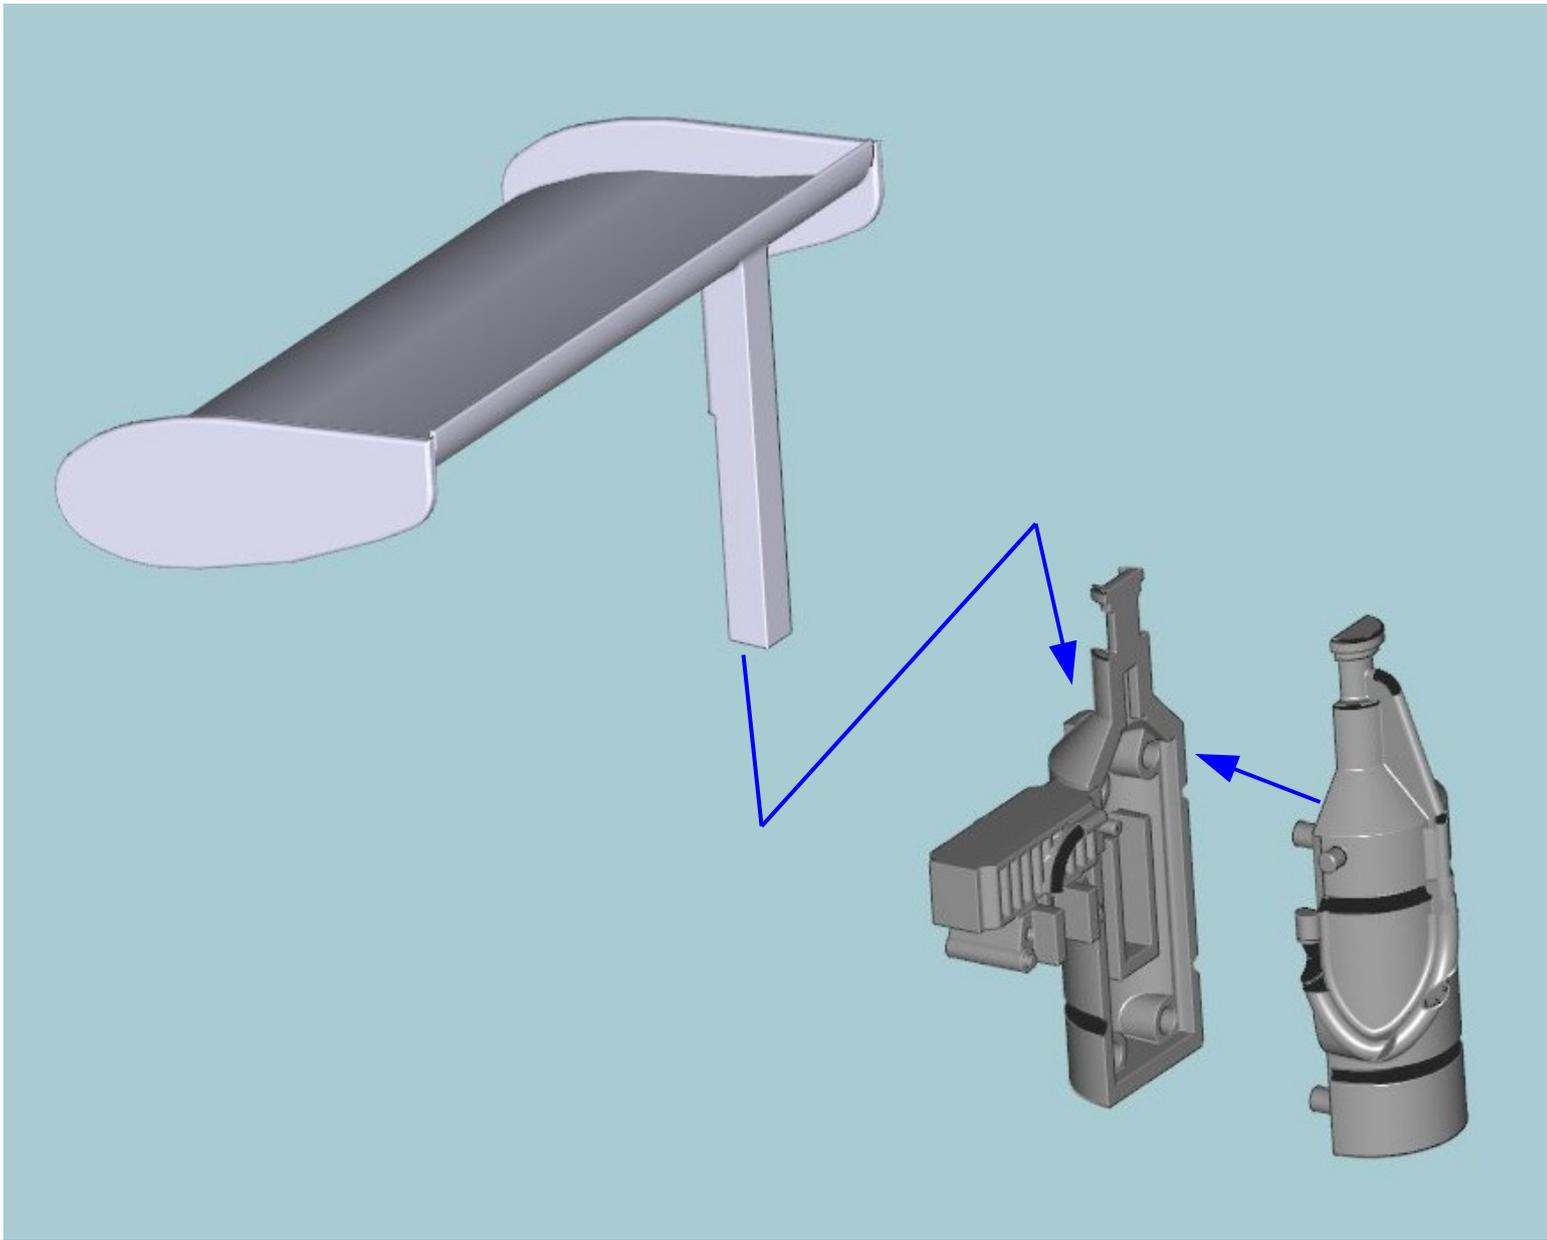

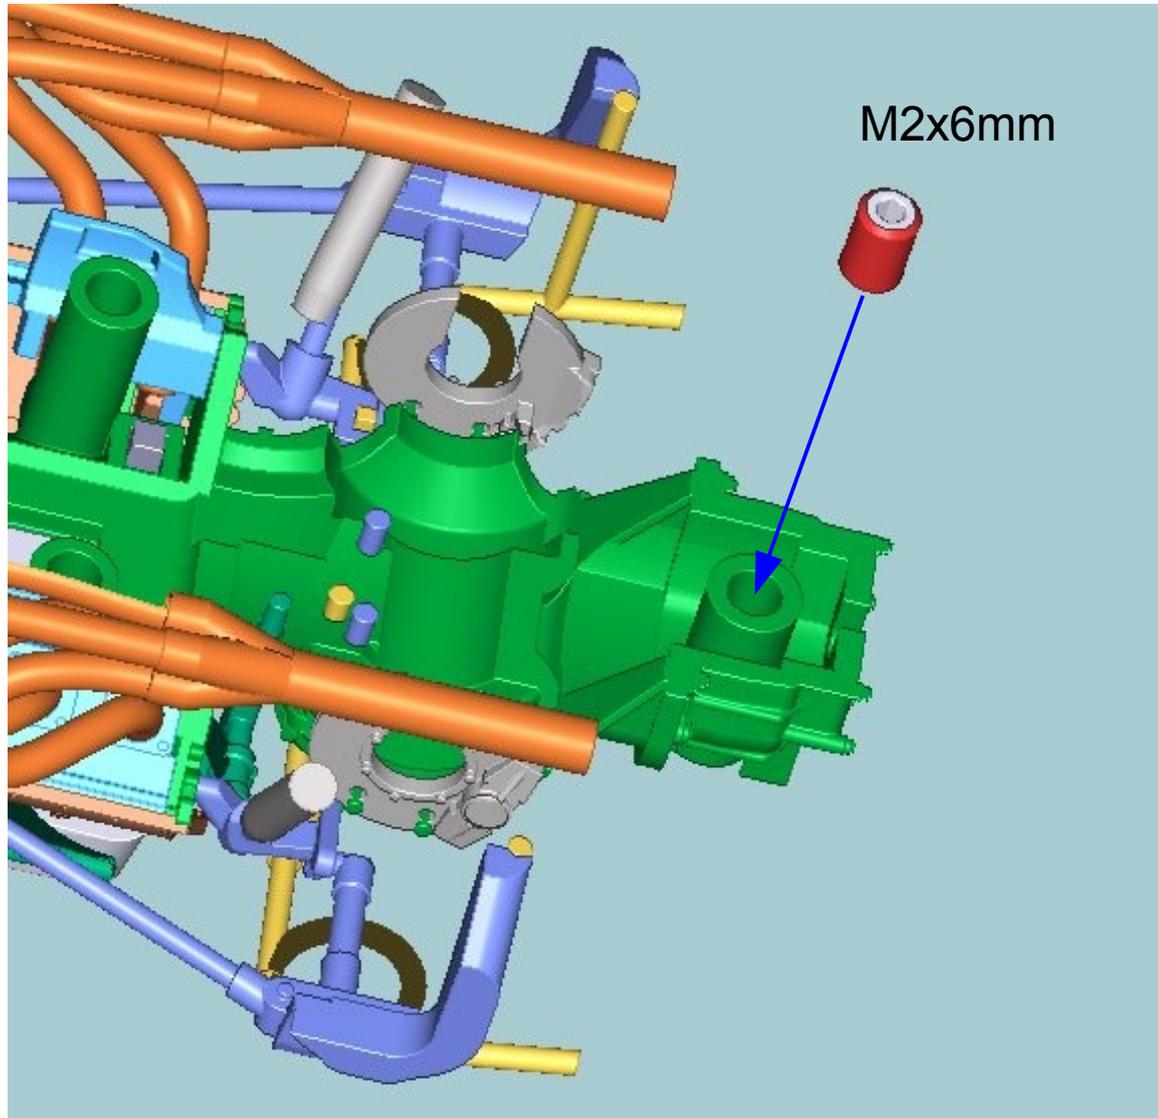

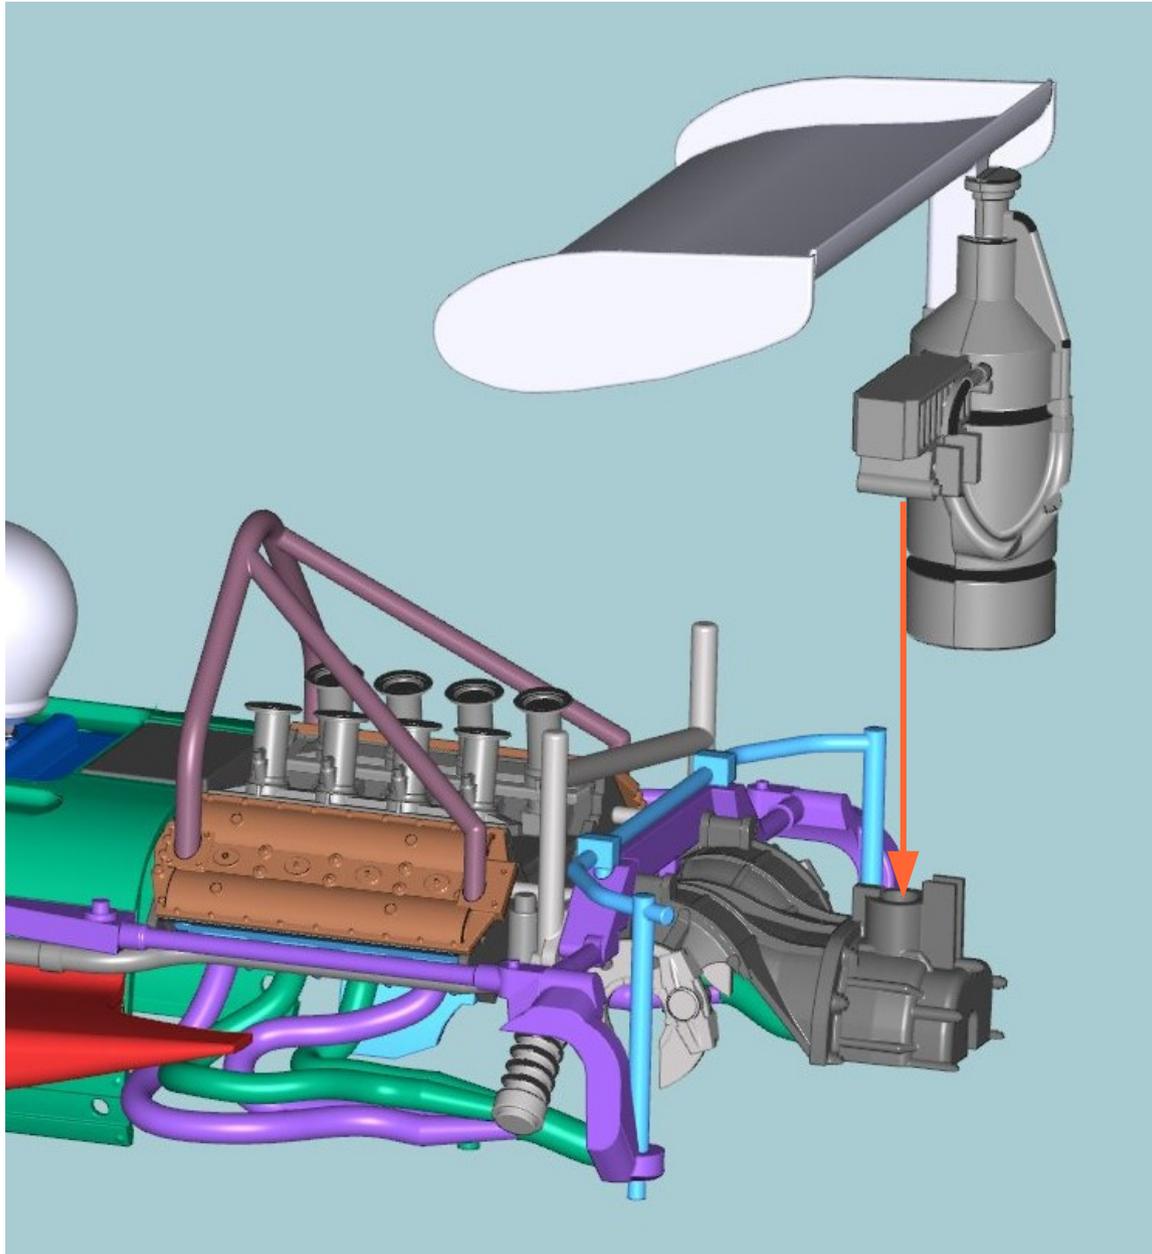

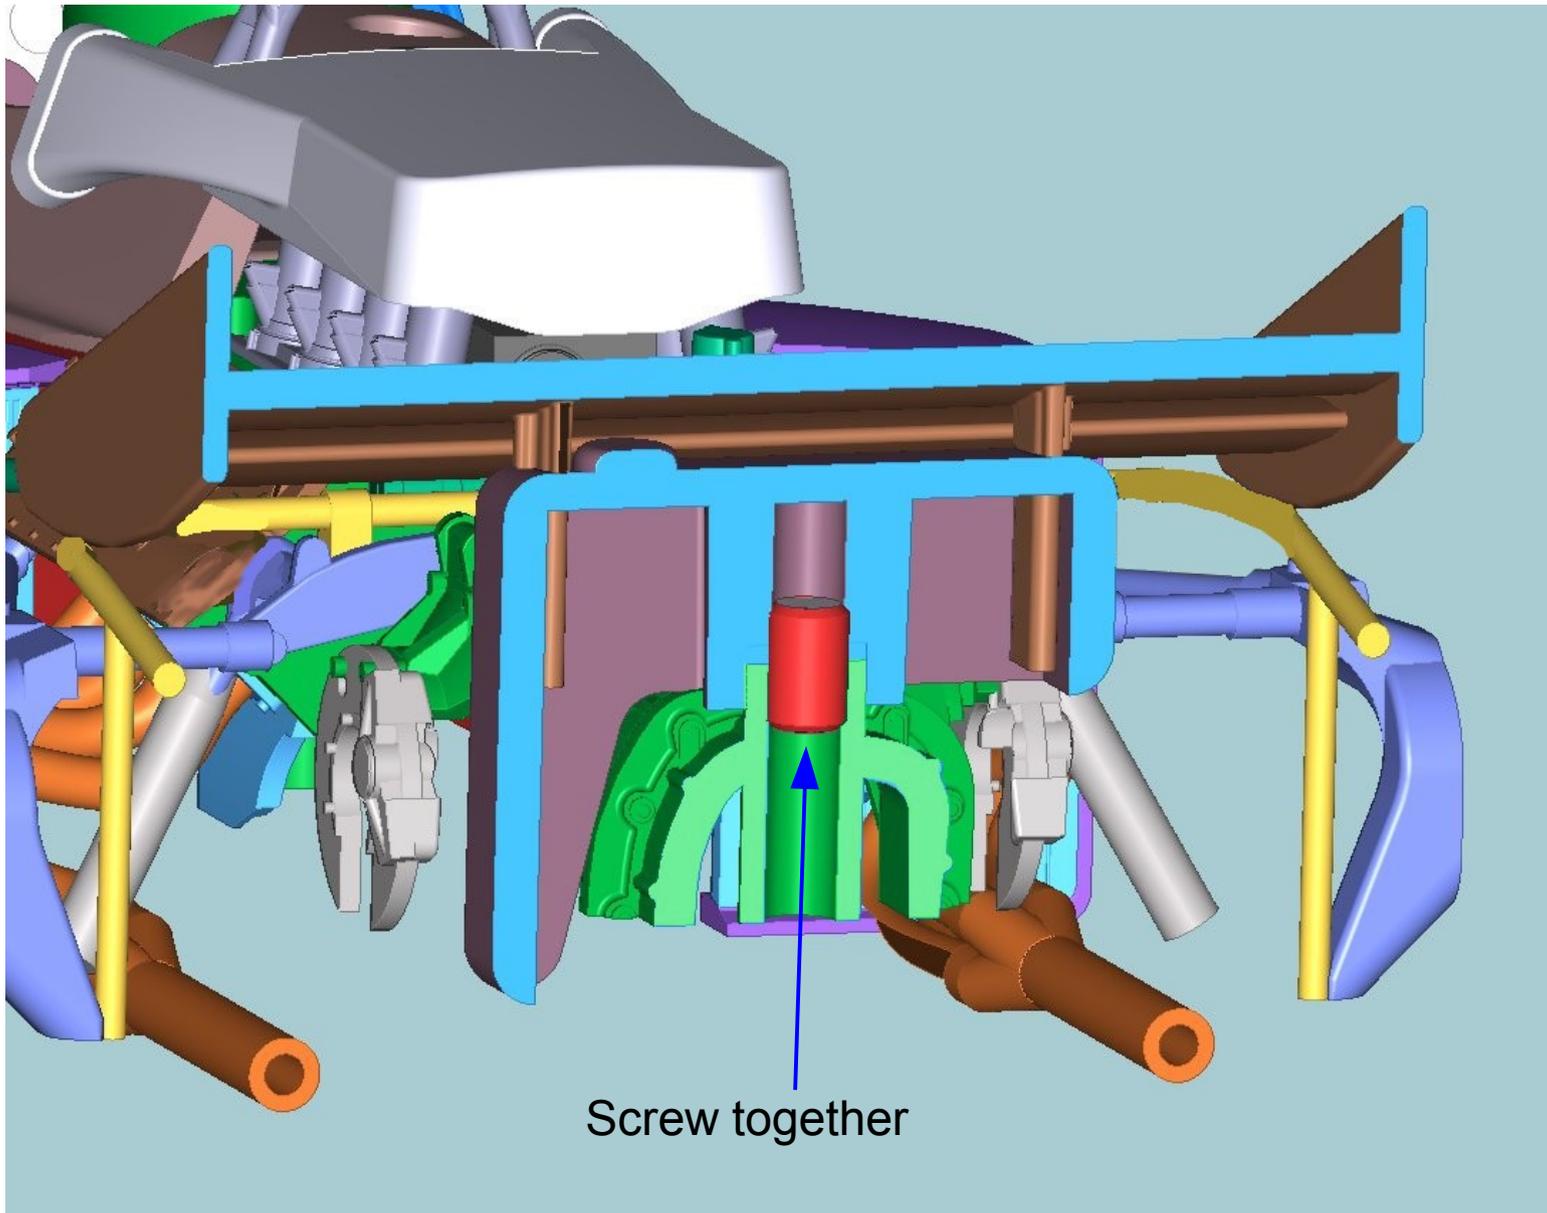

Screw together

